INSTRUCTION MANUAL
FOR
QRS SERIES
POWER SUPPLIES

Sorensen
POWER SUPPLIES

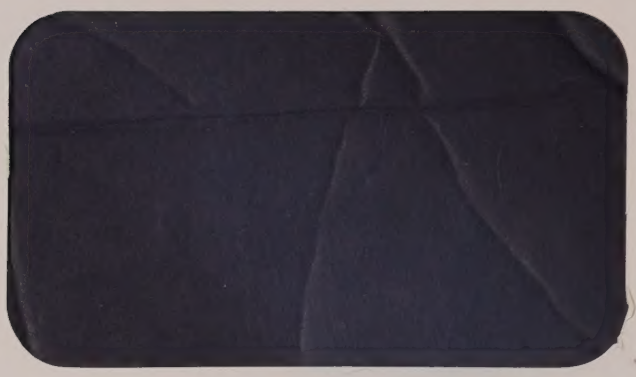

Manual No. 14-6445
MARCH 1968

INSTRUCTION MANUAL
FOR
QRS SERIES
POWER SUPPLIES

TABLE OF CONTENTS

Para No.		Page No.
	Section I. Introduction and Description	
1-1.	Introduction	1-1
1-4.	Description	1-1
1-8.	Operating Modes	1-1
1-9.	Automatic Crossover	1-1
1-10.	Remote Programming	1-8
1-11.	Remote Sensing	1-8
1-12.	Series Operation	1-8
1-13.	Parallel Operation	1-8
1-14.	Protection Features	1-8
1-15.	Specification Explanation	1-8
1-16.	PARD	1-8
1-17.	Accessories	1-8
	Section II. Preparation for Use	
2-1.	General	2-1
2-4.	Initial Inspection	2-1
2-6.	Accessory Installation	2-1
2-8.	Single-Unit Adapter	2-1
2-9.	Two-Unit Adapter	2-1
2-10.	Electrical Installation	2-1
2-12.	220-Volt Operation	2-2
2-13.	230-Volt Operation	2-2
2-14.	Input-Power Cord	2-2
2-15.	Electrical Inspection	2-4
2-17.	Voltage Mode	2-4
2-18.	Current Mode	2-4
2-19.	Specification Verification	2-4
2-21.	Voltage-Mode Regulation	2-5
2-22.	Voltage-Mode PARD	2-5
2-23.	Voltage-Mode Transient Response	2-5
2-24.	Current-Mode Regulation	2-5
2-26.	Current-Mode PARD	2-7
2-27.	Current-Mode Transient Response	2-7
2-28.	Drift	2-7

Para No. Page No.

Section III. Operating Instructions

3-1. General 3-1
3-3. Voltage-Mode Operation 3-1
3-4. Local Sensing. 3-1
3-6. Remote Sensing 3-1
3-7. Remote Programming 3-2
3-8. Resistance 3-2
3-10. Voltage Signal. 3-3
3-11. Current-Mode Operation 3-3
3-13. Remote Programming 3-3
3-14. Resistance 3-4
3-16. Voltage Signal. 3-4
3-17. Series Operation 3-4
3-21. Parallel Operation 3-4

Section IV. Principles of Operation

4-1. General 4-1
4-3. Series-pass Principle 4-1
4-5. Block-diagram Discussion 4-1
4-7. Reference Supply 4-1
4-11. Voltage-Mode Section 4-2
4-14. Current-Mode Section 4-2
4-18. Drivers and Passing Stages 4-3
4-20. Reverse-bias Section 4-3
4-22. Meter Section. 4-3
4-24. Stabilization 4-3
4-26. Input-power Section 4-3

Section V. Maintenance

5-1. General 5-1
5-3. Periodic Servicing 5-1
5-5. Troubleshooting 5-1
5-8. Calibration 5-1
5-11. Performance Testing 5-7

Section VI. Replacement Parts List

6-1. General 6-1
6-3. Manufacturer Coding. 6-1
6-5. Ordering Parts. 6-1

LIST OF ILLUSTRATIONS

Figure No.		Page No.
1-1.	Current Derating Characteristics	1-6
1-2.	Typical Crossover Characteristic (Model QRS 15-2)	1-6
1-3.	Output Impedance (Log-Log Plot)	1-6
1-4.	Outline Dimensions	1-7
2-1.	Single-unit Rack-Mount Adapter	2-2
2-2.	Two-unit Rack-Mount Adapter	2-3
2-3.	Alternate Input Connections	2-3
2-4.	Voltage-Mode Regulation, PARD and Response Setup	2-4
2-5.	Current-Mode Regulation and PARD	2-6
3-1.	Controls and Indicators	3-1
3-2.	Remote Sensing	3-2
3-3.	Voltage-Mode Programming (with Remote Sensing)	3-3
3-4.	Voltage-Signal Common Input-Output Connections	3-3
3-5.	Current-Mode Programming	3-4
3-6.	Series Operation	3-5
3-7.	Parallel Operation (with Remote Sensing)	3-6
4-1.	Series-Pass Principle	4-1
4-2.	Block Diagram	4-2
5-1.	Component Board	5-3
5-2.	Typical Partial Disassembly	5-4
5-3.	Schematic Diagram	5-5/6

LIST OF TABLES

Table No.		Page No.
1-1.	Unit Specifications (Sheet 1 of 4)	1-2
	(Sheet 2 of 4)	1-3
	(Sheet 3 of 4)	1-4
	(Sheet 4 of 4)	1-5
1-2.	Accessory Equipment	1-8
2-1.	Performance Specifications at Test Points	2-5
3-1.	Controls and Indicators	3-2
3-2.	Recommended Rectifiers, Series Operation	3-5
5-1.	Troubleshooting Data	5-2
5-2.	Calibration Data	5-7
6-1.	Replacement Parts List (Sheet 1 of 6)	6-2
	(Sheet 2 of 6)	6-3
	(Sheet 3 of 6)	6-4
	(Sheet 4 of 6)	6-5
	(Sheet 5 of 6)	6-6
	(Sheet 6 of 6)	6-7

SECTION I
INTRODUCTION AND DESCRIPTION

1-1. INTRODUCTION.

1-2. This manual contains operation and maintenance data on the QRS Series power supplies, manufactured by Raytheon Company, Sorensen Operation, Norwalk, Conn. Its purpose is to familiarize the user with unit functions, to introduce the varied configurations to which the unit is convertible and to provide sufficient maintenance data to assure long operating life. Note that the series consists of 7 models in the 30- and 80-watt classes with outputs ranging to 60 Vdc. Differences in models will be highlighted where required.

1-3. Six major sections form the manual divisions. Section I contains a description of the Series and its features, a tabular listing of complete unit specifications, and a set of characteristic curves. Details on initial inspections and checkout procedures are given in Section II. Operating instructions, including methods for adapting units to various applications, comprise Section III. Sections IV and V provide the principles of operation and maintenance procedures, respectively. A replacement parts list, Section VI, concludes the manual.

1-4. DESCRIPTION.

1-5. Designed for either bench use or rack mounting (para 1-17), a typical QRS power supply provides a precisely regulated d-c output, adjustable over a wide range. It operates from any of three nominal a-c inputs and, in addition, exhibits a rapid response to transients, both load and line. (For a complete tabulation of specifications, refer to Table 1-1.)

1-6. All semiconductors used in the QRS are silicon types and contribute significantly to the unit ambient-temperature characteristics. High-dissipation transistors are mounted to a cast aluminum-alloy heatsink; low-dissipation devices are located on a plug-in printed-circuit board. Cooling is by convection. Mechanical design permits easy component accessibility, with no sacrifice in unit size (see Figure 1-4).

1-7. Other mechanical features include a human-engineered front panel that mounts all operating controls and indicators used in normal operation. These include a dual-tandem potentiometer which gives fine and coarse control over the output voltage, a current-adjust control, a volt-ammeter with selector switch, an input-power switch and a power-on light. In addition, fluted-nut, miniature binding posts from which the output may be taken are situated on the front panel. At the rear, a mode-selector terminal board and the input fuse holder are mounted directly below the heatsink. By manipulating terminal-board links, the unit may be selected to such applications as voltage-mode programming, current-mode programming, parallel operation and remote sensing. A set of output terminals is also provided on the board.

1-8. OPERATING MODES. QRS Models have two basic operating modes, constant voltage and constant current. In the former, the output voltage is regulated at the front-panel selected or programmed value, and the output current varies with the load. In constant-current operation, the output-current is regulated at the selected value while the output voltage varies as a function of load.

1-9. AUTOMATIC CROSSOVER. The automatic-crossover system enables the unit to transfer operating modes as a function of load requirements. If, for example, load current attempts to increase above the setting of the current-adjust control, the unit will switch operation automatically from the voltage to current mode. If the load requirements are lowered, return to the voltage mode will occur automatically.

	QRS MODELS							
	ALL	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
INPUT								
Voltage Ranges (Vac)	105-125 200-240 210-250							
Frequency Range (Hz)	48-440							
Phase	1							
Max.Current (Aac)								
at 115 Vac		0.95	0.95	0.95	0.95	2.3	2.3	2.3
at 230 Vac		0.5	0.5	0.5	0.5	1.15	1.15	1.15
Power Factor(1)		0.86	0.86	0.86	0.86	0.78	0.78	0.78
Efficiency (%)		35	35	35	35	42	42	46
OUTPUT								
Voltage Mode								
Range (Vdc)		0-15	0-30	0-40	0-60	0-20	0-40	0-60
Coarse Adj.Range	Full Range							
Fine Adj.Range (mV)		150	300	400	600	200	400	600
Resolution (typical) (mV)		1.5	3.0	4.0	6.0	2.0	4.0	6.0
Output Current Range								
at 55°C (2) (Adc)		0-2	0-1	0-.75	0-.5	0-4	0-2	0-1.5
Current Mode								
Current Range	(See Volt.Mode)							
Adjust Range	Full Range							
Resolution (typical)(mA)		6.0	3.0	2.5	1.5	12.0	6.0	4.5
Voltage Compliance	Full Volt.Range							
Current/Volt. Crossover								
Static (typical)	See Fig.1-2							

(1) At nominal input and full rated output.
(2) For derating characteristics, see Figure 1-1.

Table 1-1. Unit Specifications (Sheet 1 of 4)

	QRS MODELS							
	ALL	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
PERFORMANCE[3]								
Voltage Mode Regulation [4]	±0.01% or ± 1 mV[5]							
PARD (Ripple)[6]								
50 to 60 Hz Input								
Max. RMS Volt (μV) (10Hz-7MHz bandwidth)	400							
Max. P-P Volt. (mV) (10Hz-25 MHz bandwidth)	6							
Transient Response [7] (μs)	50							
Band (mV)		10	20	20	40	10	20	40
Output Impedance	R + JωL							
Low Frequencies (f 1KHz)								
R (mohms)		0.4	1.5	2.5	6.0	0.25	1.0	2.0
L (μh)		0.5	1.2	2.0	3.0	0.4	0.8	1.5
Output impedance at 100 KHz is less than 0.2 ohms and at 600 KHz is less than 1.0 ohms.								
Temperature Coefficient	(0.015% + 300 μV)°C							
Drift [8] (typical)	0.04%							
Remote Error Sensing Compensation (max)	1 volt/load lead							

(3) Output performance specifications are valid at rear terminals only.
(4) For a combined full line swing and a no load-to-full load (or full load-to-no load) change.
(5) Whichever is greater.
(6) With chassis ground tied to input ground.
(7) For a step load change, no load to full load or full load to no load, and recovery to within specified band.
(8) 8 hours after warm up at constant line voltage, load and ambient temperature.
(9) E_o is the output voltage.

Table 1-1. Unit Specifications (Sheet 2 of 4)

	QRS MODELS							
	ALL	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
Remote Prog. Coefficient Resistance Volt. Signal	100±.5 ohms/volt 1 volt/volt							
Overload Protection	Crossover to Current Mode							
Output Voltage Turn-On, Turn-Off Overshoots	None							
Max. Capacitive Load	Any							
Current Mode Regulation(10)	±(.02% + β)							
β(μA)		200	200	200	200	350	350	350
PARD (Ripple) 50 to 60 Hz Input(6)								
Max. RMS Current (μA) (10Hz-7MHz bandwidth)		300	300	300	300	600	600	600
Max. P-P Current (mA) (10Hz-25MHz bandwidth)	3							
Transient Response Output Impedance Temperature Coefficient	See Note 11. See Fig.1-3(12) 0.05% I_o/°C							
Drift(8) (typical)	(0.1%+ΩmA) Ω =	2	1	0.75	0.5	4	2	1.5

(10) For a combined full line swing and load change of short circuit to E max (or E max to short circuit) and recovery to a ±1% band.

(11) Function of $R_L C_o$ time constant (R_L = load resistance, C_o = value of output capacitor C19).

(12) Characteristic is typical for a Model 20-4. Typical curves for other specific models will be supplied upon request.

Table 1-1. Unit Specifications. (Sheet 3 of 4)

	QRS MODELS							
	ALL	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
Remote Prog. Coefficient[13]								
Resistance (ohms/A)		500	1000	1330	2000	250	500	667
Signal (volts/A)		0.5	1.0	1.33	2.0	0.25	0.5	0.67
Accuracy	± 10%							
Overload Protection	Crossover to Voltage Mode							
Output Current Turn-On, Turn-Off Overshoots	None							
MISCELLANEOUS								
Ambient Temp Range	-20 to +71°C[2]							
Series Operation	Max. 200 Vdc System Output							
Parallel Operation	Master-Slave							
Cooling	Convection							
Isolation Voltage to Ground								
Input	1000 Vdc							
Output	200 Vdc							
Dimensions	See Fig. 1-4							
Weight (lb)		12.5	12.5	12.5	12.5	19.25	19.25	19.5
Meters -								
Voltage Range (Vdc)		0-15	0-30	0-50	0-60	0-25	0-50	0-80
Current Range (Adc)		0-3	0-1.5	0-1	0-.6	0-5	0-2.5	0-2
Accuracy	±3%							

(13) Value at I_o rated decreases approximately linearly to 83% at zero current setting.

Table 1-1. Unit Specifications (Sheet 4 of 4)

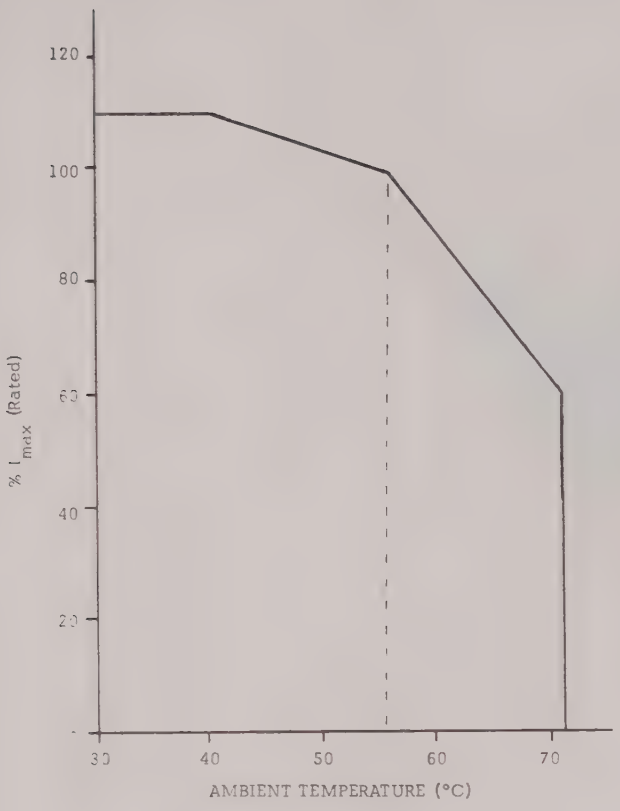

Figure 1-1. Current Derating Characteristics

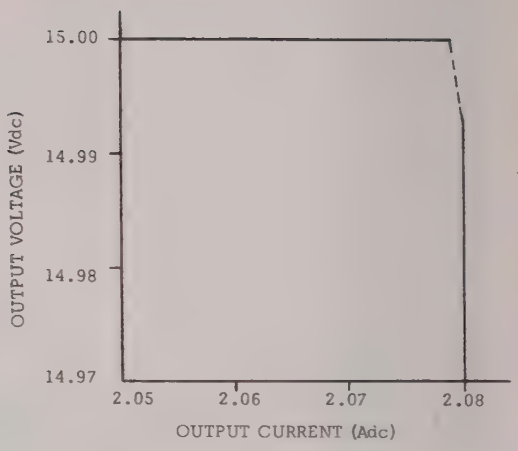

Figure 1-2. Typical Crossover Characteristics (Model QRS 15-2)

Figure 1-3. Output Impedance (Log-Log Plot) (Model QRS 20-4)

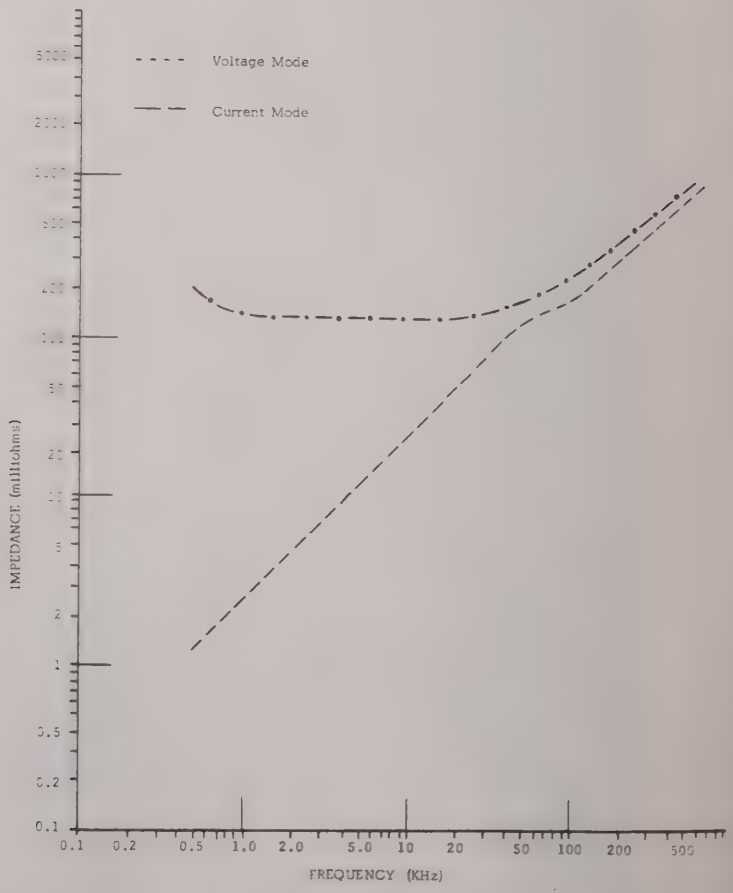

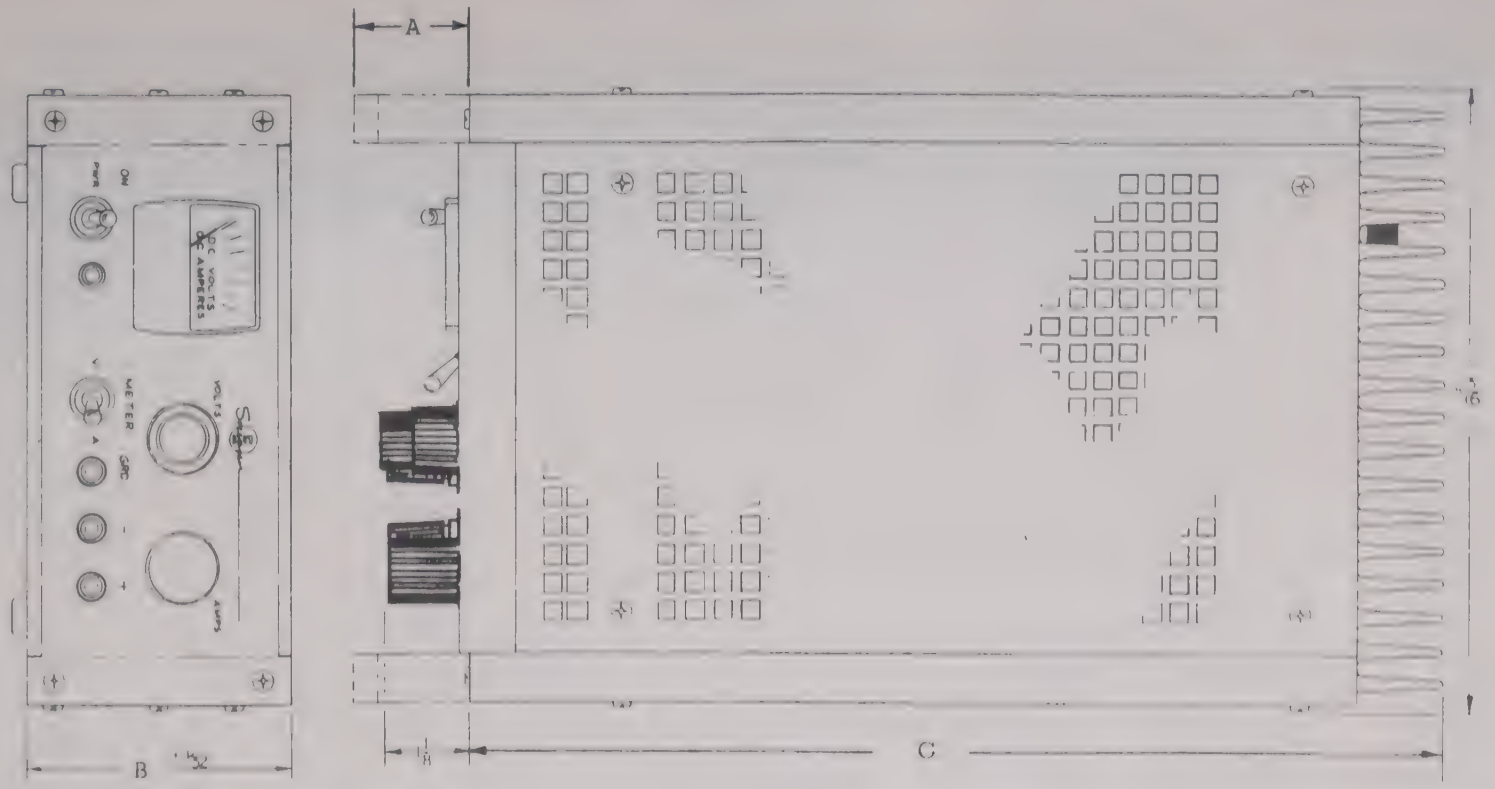

	QRS MODELS						
	15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5
A	1-1/2	1-3/4	1-1/2	1-1/2	1-3/4	1-1/2	1-3/4
B	3-15/32	5-7/32	3-15/32	3-15/32	5-7/32	5-7/32	5-7/32
C	12-3/4	13	12-3/4	12-3/4	13	12-3/4	13

Note: All dimensions are in inches.

Figure 1-4. Outline Dimensions.

1-10. REMOTE PROGRAMMING. Any QRS Model may be remotely programmed, i.e., its output altered from a distant location, in either the voltage or current mode by introducing a calculated resistance or signal into the appropriate programming circuit. This may be readily accomplished through the link arrangements at the rear terminal board.

1-11. REMOTE SENSING. Terminals located on the rear-terminal board offer the means of extending a unit's regulating point from the output terminals to the load. This, in effect, compensates for variations in the load-lead IR drop. The maximum drop for which a unit will compensate is 1 volt per load lead.

1-12. SERIES OPERATION. For applications requiring voltages higher than a single QRS can provide, a number of units may be connected in series. Maximum system output is specified at 200 Vdc. Regulation in series operation is the sum of the regulations for all units.

1-13. PARALLEL OPERATION. Parallel operation may be used to service those applications requiring a higher output current than a single QRS can provide. Paralleling is indirect through a "master-slave" approach, i.e., the amplifier of the "master" unit controls the output of all units in the system. In parallel operation, derate each unit's maximum output current to 90%.

1-14. PROTECTION FEATURES. Protection against the effects of overloads and internal short circuits is provided in the first case, by automatic crossover and, in the second, by the input fuse. In addition, open sensing leads or links will not drive the unit into high output voltage. Internal rectifiers preclude this by clamping the output to about 1-1/2 volts above output setting.

1-15. SPECIFICATION EXPLANATION.

1-16. PARD. The term PARD is an acronym for Periodic And Random Deviations and encompasses those variations in output previously designated ripple and noise. Precisely, PARD is the deviation in output voltage from its average value, over a specified bandwidth (10Hz-7MHz, 10Hz-25MHz) with all external and environmental parameters held constant.

1-17. ACCESSORIES.

1-18. Handles, mounting adapters and the VP overvoltage load protector, all easily installed, are offered as accessories to the QRS Series. Load protection, provided by the VP, drops the output at a pre-selected maximum voltage. Rack-mounting adaptors are no greater in height than the units and offer the optimum in rack-space utilization. Accessories and their designators are listed in Table 1-2.

QRS MODELS	OVERVOLTAGE PROTECTION		RACK-MOUNT ADAPTERS				HANDLE SETS	
			1-Unit		2-Unit			
	VP-1	VP-3	RP12	RP13	RP14	RP15	HS-1	HS-2
15-2	X		X		X		X	
20-4	X			X		X		X
30-1	X		X		X		X	
40-.75	X		X		X		X	
40-2	X			X		X		X
60-.5		X	X		X		X	
60-1.5		X		X		X		X

Table 1-2. Accessory Equipment

SECTION II
PREPARATION FOR USE

2-1. GENERAL.

2-2. After unpacking, initial inspections and preliminary checkout procedures should be performed to assure that unit is in good working order. Basically, these consist of visually checking for damaged parts and components, and making an electrical check. Procedures are also given for verifying many of the unit's performance specifications. If it is determined that the unit is damaged, follow the instructions on the Damage and/or Loss in Shipment form enclosed with the unit, and notify the carrier immediately. The carrier's claim agent will then prepare a report of damage. The user is required to send this report to the Service Dept., Raytheon Company, Sorensen Operation, Richards Ave., Norwalk, Connecticut. Sorensen will, in turn, advise the user as to what action is required to repair or replace the supply.

2-3. In addition to inspection and check-out procedures, this section contains instructions on altering unit input wiring for either 220- or 230-volt operation.

2-4. INITIAL INSPECTION.

2-5. Proceed as follows to inspect for damage incurred during shipment:

a. Inspect panel and chassis for dents, paint chips and obvious signs of structural damage.

b. Check action of rear-mounted fuseholder. Assure that holder contains a properly rated fuse. Fuse ratings for both 115 and 220/230 Vac inputs appear above holder.

c. Turn front-panel controls from stop-to-stop. Rotation should be smooth.

d. Set PWR switch to ON and then off; then test METER switch. Switching action should be both positive and audible.

e. Check for cracked or broken indicator-lamp lens.

f. Inspect for a cracked meter window. If pointer is off zero, reset using adjust screw (80-watt units only).

g. Check input cord for physical damage. Tug lightly on cord near chassis to make certain relief grommet grips cord.

h. Inspect terminal board. Links should be firmly connected across barriers and between terminals 2-3, 3-4, 5-6, 7-8, 9-10 and 11-12.

i. Remove screws retaining top cover to chassis. Inspect printed board and components for damage. Reinstall cover unless unit is to be adapted for rack mounting (para 2-6) or 220/230 Vac input (para 2-10).

2-6. ACCESSORY INSTALLATION.

2-7. Table 1-2 lists the various accessories designed for use with the QRS Series. These include handles and two types of rack-mount adapters. The following paragraphs give installation instructions for the accessories excluding the handles. These are easily attached to the front panel through tapped holes with the screws provided.

2-8. SINGLE-UNIT ADAPTER. There are two single-unit adapters, one for low-power units and the other for high-power models. However, the adapters are similar and the methods of assembling are identical. The installation is depicted in Figure 2-1. When installing, remove top-cover screws, and then unit feet. Interchange top-cover and feet-mounting screws. Loosely assemble parts, place entire assembly on a flat surface to properly align all parts, and then tighten screws.

2-9. TWO-UNIT ADAPTER. Two-unit adapters are available for both low- and high-power units. The adapters are similar, and methods of assembly are identical. Figure 2-2 illustrates adapter installation. Remove screws from unit's top covers, detach feel on each unit, interchange top-cover and feet-mounting screws, and remount covers. Loosely assemble adapter and units. Next, with assembly resting on a flat surface, align all edges, and then tighten screws.

2-10. ELECTRICAL INSTALLATION.

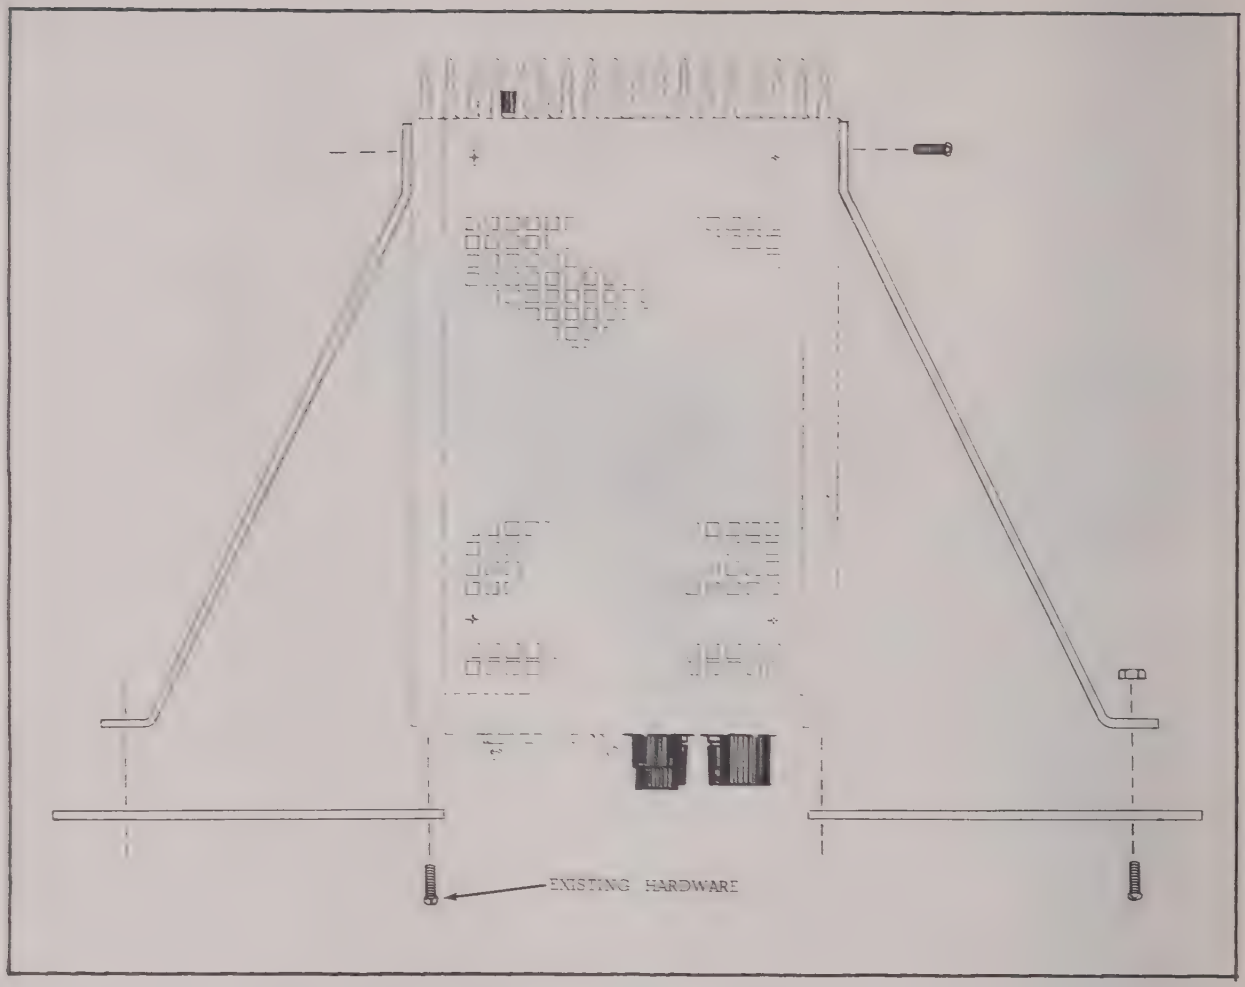

Figure 2-1. Single-Unit Rack-Mount Adapter

2-11. Units in the QRS Series are factory wired to accept a nominal 115-Vac input. However, either of the two alternate inputs may be used by making a few simple alterations.

2-12. 220-VOLT OPERATION. To adapt a QRS unit to 220 Vac input, proceed as follows:

a. Remove top cover.

b. At transformer T1, remove jumpers across taps 11 and 13, and 12 and 15 (Figure 2-3).

c. Solder a jumper across taps 12 and 13.

d. Disconnect white wire at tap 15 and reconnect at tap 14.

e. Change input fuse to a .75 A rated for 30-watt models or to a 1.5 A rated for 80-watt models.

f. Remount cover.

2-13. 230-VOLT OPERATION. Procedures for adapting a QRS unit to 230-Vac input are identical to those provided in para 2-12 with this exception: do not relocate white wire at tap 15 to tap 14.

2-14. INPUT-POWER CORD. The input-power cord terminates externally in a three-prong polarized plug. The unit chassis is wired to the plug through the line cord, and therefore, insertion of the plug into a compatible receptacle will automatically ground the unit. If a grounded input is not available, use an adapter, making sure that the adapter's external lead is well grounded

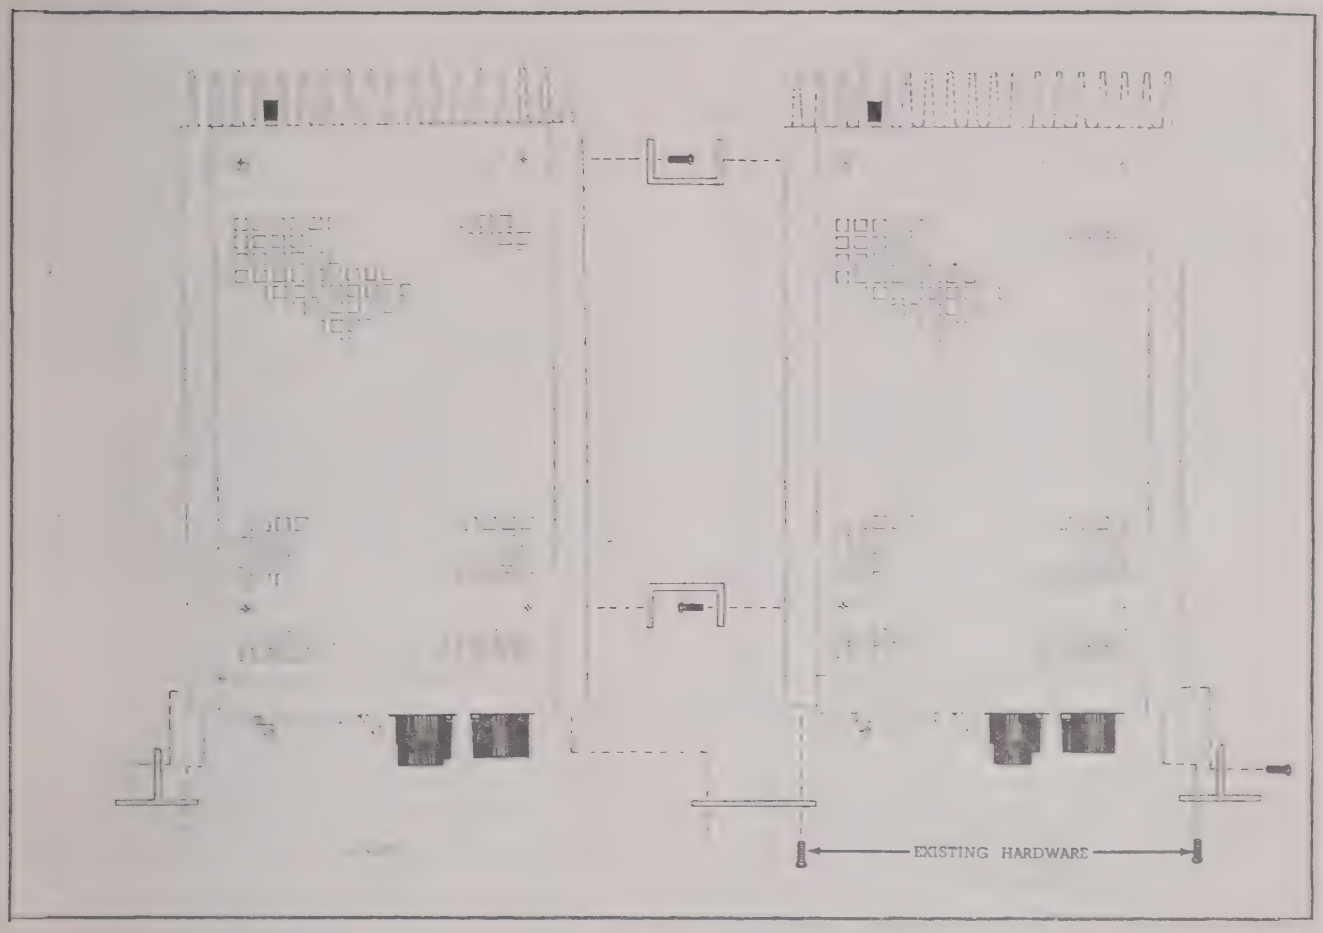

Figure 2-2. Two-unit Rack-Mount Adapter

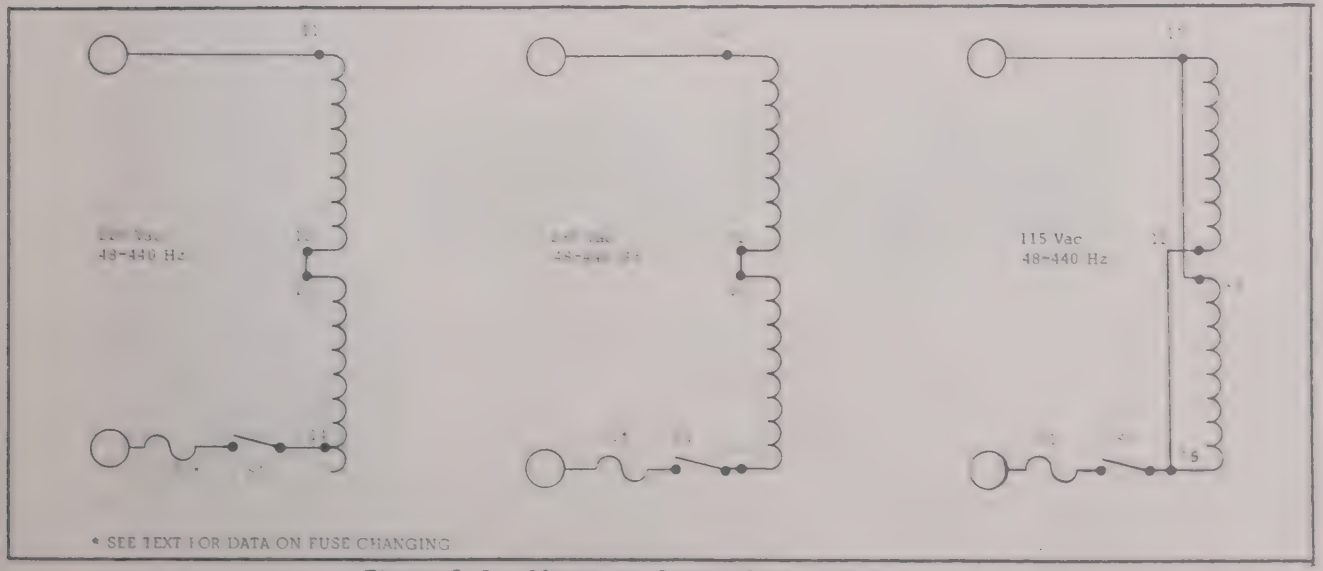

Figure 2-3. Alternate Input Connections

2-15. ELECTRICAL INSPECTION.

2-16. The following paragraphs describe the procedure for making an initial electrical inspection. If specification verification is required at incoming inspection, refer to para 2-19.

2-17. VOLTAGE MODE. To check voltage-mode operation, proceed as follows:

a. Rotate VOLTS and AMPS controls fully counterclockwise.

b. Connect a test voltmeter across output terminals (4 and 5 on terminal board or "+" and "-" binding posts on front panel). Select a voltmeter range compatible with unit output rating.

Note

Do not loosen or remove interconnecting links on terminal board.

c. Insert power cord into a suitable receptable, and set PWR switch to ON.

d. Set METER selector switch to the V position.

e. Slowly rotate VOLTS control clockwise. Minimum control range should be from 0 to maximum rated output voltage (Table 1-1).

f. Set PWR switch to off.

2-18. CURRENT MODE. To check current-mode operation, proceed as follows:

a. Set METER selector switch to A position.

b. Rotate coarse VOLTS control and AMPS control fully counterclockwise.

c. Turn fine VOLTS control fully clockwise.

d. Connect a d-c ammeter between terminals 4 and 5 on terminal board or between front-panel binding posts. Select leads of sufficient current-carrying capacity and an ammeter range compatible with unit's rated current output.

e. Set PWR switch to ON.

f. Rotate AMPS control slowly clockwise. Control range should be from 0 to maximum rated output (Table 1-1 and Figure 1-1). Compare test meter indication with front panel indicator.

2-19. SPECIFICATION VERIFICATION.

2-20. Sensitive instruments, as units in the QRS Series are, require rigorous testing methods if a true evaluation of performance is to be made. Wherever possible, use twisted leads with test equipment to reduce stray pickup. At the power-supply terminal board, these leads must be

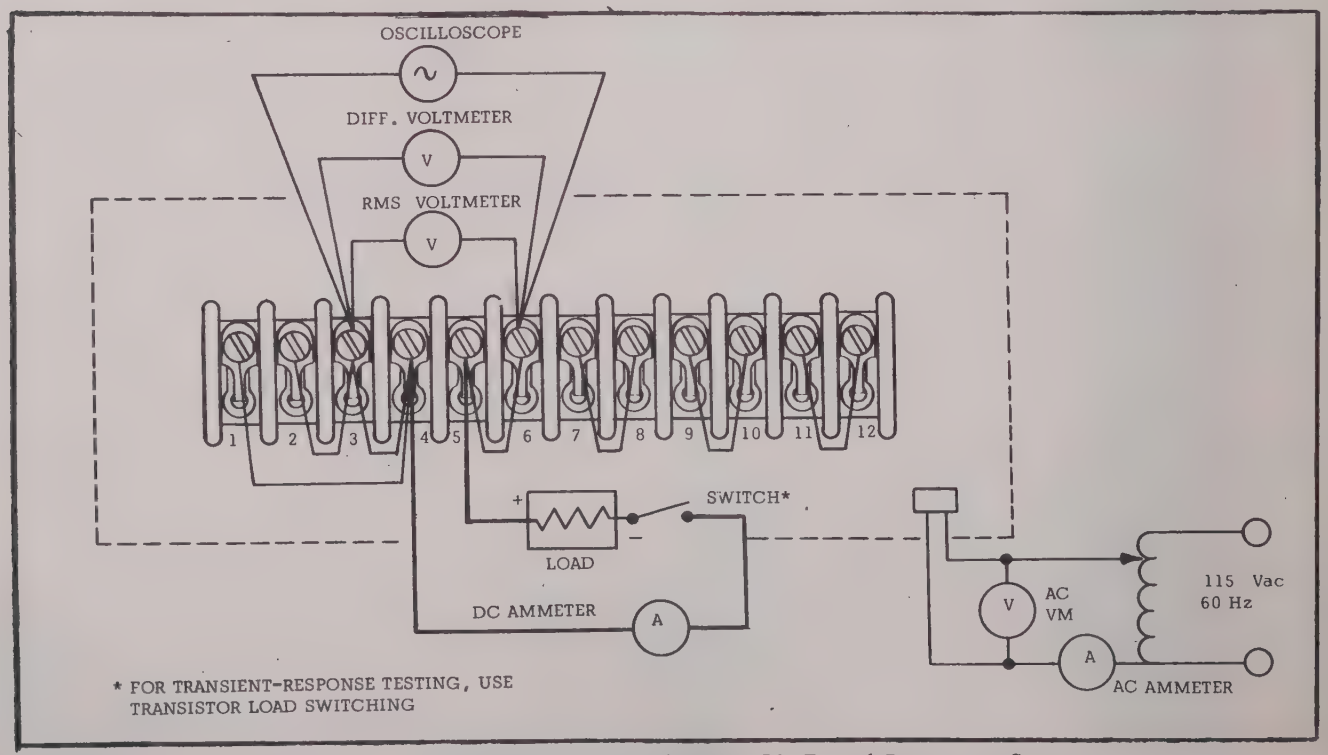

Figure 2-4. Voltage-Mode Regulation, PARD and Response Setup

firmly screwed to the terminals. Alligator clips and similar types of connectors are not suitable. Note that the output specifications are applicable at rear terminals only. (Front-panel binding posts sometimes introduce errors which, although small, are sufficient to adversely influence measurements.) In addition, grounding techniques in which more than one device in the test system is grounded (excluding a-c inputs) may, through ground loops, introduce extraneous ripple. If generated, this ripple, although unrelated to supply output, will be displayed on the test oscilloscope.

2-21. VOLTAGE-MODE REGULATION. To check voltage-mode regulation, first connect test system as shown in Figure 2-4. For regulation testing, the oscilloscope and RMS voltmeter are not required. Use a variable autotransformer for a-c input, connect an a-c voltmeter across transformer output terminals and then proceed as follows:

a. At no load, adjust unit output voltage to maximum rated.

b. Adjust differential voltmeter's internal voltage to obtain a null indication.

c. With input set at 115 Vac, load the unit until d-c ammeter indicates rated output current (at 55°C). Record deviation from null position.

d. Set the input to 105 Vac, and readjust voltmeter's internal voltage to regain the null position. Then, with full load on unit, vary the input voltage to 125 Vac. Note the deviation from null.

e. Sum the deviations recorded in steps "c" and "d". Total should be equal to or less than that stipulated in Table 2-1.

2-22. VOLTAGE-MODE PARD. To check periodic and random deviations in the voltage mode, connect a true RMS voltmeter and oscilloscope across unit sense terminals as shown in Figure 2-4. RMS voltmeter should have a 10Hz-7MHz bandwidth and bandwidth of oscilloscope should be 10Hz-25MHz.

a. Apply 115 Vac to input.

b. At no load, adjust unit output voltage to maximum rated.

c. Apply load until d-c ammeter indicates rated output current at 55°C.

d. Observe oscilloscope and voltmeter. Maximum RMS voltage should be no greater than 400 μV and typical peak-to-peak voltage should be equal to or less than 6 mV.

2-23. VOLTAGE-MODE TRANSIENT RESPONSE. In checking transient response, it is more convenient to repetitively load and unload at a rate of 100 to 1000 Hz. To obtain the load-switching rate required (switching time should be small in comparison to rated response time) transistor load switching is recommended. Leads in the test system should be short to reduce inductance, and load resistors should be noninductive. Specification is 50 μs or less to return to a specified band (Table 2-1) following a full load-to-no load, or no load-to-full load change.

2-24. CURRENT-MODE REGULATION. To obtain

	QRS MODELS						
	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
Volt.Mode Regulation (mV)	3.0	6.0	8.0	12.0	4.0	8.0	12.0
Transient Response Band (mV)	10	20	20	40	10	20	40
Cur.Mode Regulation (μA)	1200	800	700	600	2300	1200	1200
Cur.Mode PARD RMS (μA)	300	300	300	300	600	600	600
Cur.Mode Drift X = (see paragraph 2-28)	2	1	0.75	0.5	4	2	1.5

Table 2-1. Performance Specifications at Test Points

meaningful current-mode regulation data, test with link between terminals 2 and 3 removed, i.e., without the output capacitor (C19). This is a suggested procedure inasmuch as the compliance time constant, determined by the load resistance and the output capacitance, delays recovery to the regulation band. This delay may be sufficiently long (2 to 5 seconds at light load currents) to allow line transients and short-term drift to become significant (and perhaps major) components of the output deviation. Without the output capacitor, the exponential recovery effect is virtually eliminated, and consequently return to the regulation band is extremely rapid. After taking regulation data, add capacitor (C19) for separate measurement of leakage current.

2-25. A current-mode regulation test consists of measuring the voltage-drop deviation, resulting from a full-line swing and a full-load change across the shunt resistor. To set up test system, see Figure 2-5. A 1-ohm, ±1% shunt is recommended. To reduce temperature coefficient effects, the shunt selected should be capable of dissipating 10 times the maximum power output attainable. The load must be able to absorb the full compliance voltage. For regulation testing, the true RMS voltmeter and oscilloscope are unnecessary.

a. Remove link between terminals 2 and 3, and with no load applied, rotate both VOLTS controls fully clockwise. Note output voltage indicated by digital voltmeter.

b. Apply load until output voltage drops to exactly the maximum rated compliance voltage (refer to Table 1-1).

c. Set internal voltage of differential voltmeter to obtain a null indication.

d. Close load shorting switch and record deviation.

e. Open switch and adjust input voltage to 105 Vac. If necessary, reset voltmeter to null position and then vary the input to 125 Vac. Note any deviation.

f. Sum the deviations. Total obtained should be no greater than that specified in Table 2-1. Reinstall link between terminals 2 and 3.

g. Measure leakage current of C19 and add to sum obtained in "f".

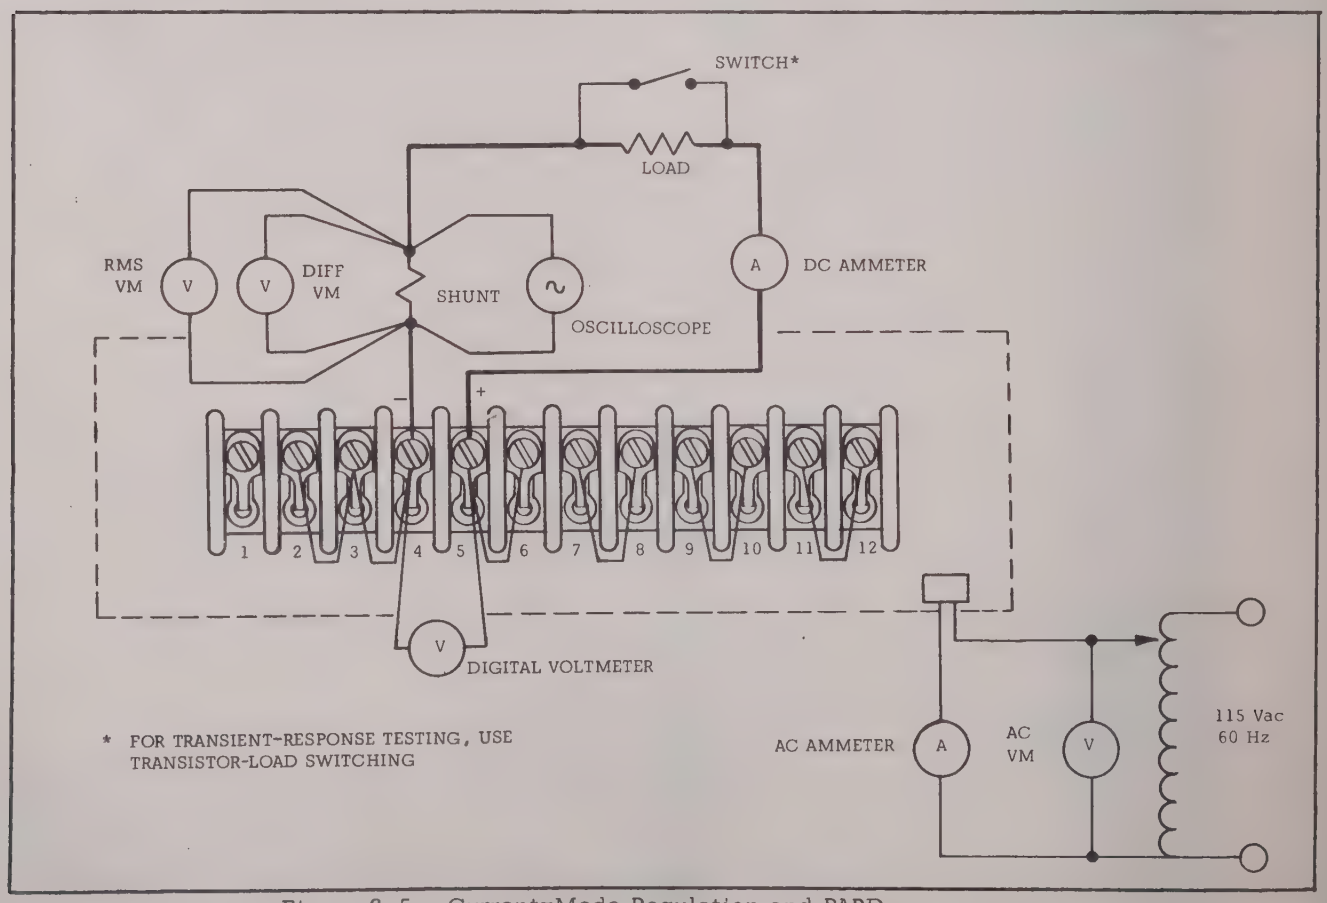

Figure 2-5. Current-Mode Regulation and PARD

2-26. CURRENT-MODE PARD. To check current-mode periodic and random deviations, connect a true RMS voltmeter and an oscilloscope across shunt as shown in Figure 2-5. The differential voltmeter is not required. Load resistor should be noninductive.

a. Set input voltage to 125 Vac.

b. Apply sufficient load to obtain maximum compliance-voltage indication on digital voltmeter.

c. Observe RMS voltmeter and oscilloscope. Maximum allowable peak-to-peak current is 3 mA (10 Hz-25 MHz bandwidth) and RMS current should not be greater than that specified in Table 2-1.

2-27. CURRENT-MODE TRANSIENT RESPONSE. This is a function of the $R_L C_o$ time constant where R_L = load resistance and C_o = value of output capacitor C19. (See Table 1-1).

2-28. DRIFT. Run drift tests on a strip-chart recorder at constant load, line and ambient temperature. Allow one-half hour for voltage-mode warmup and a full hour for current-mode warmup. Specification for voltage-mode drift is 0.04% of the output voltage (typical) and that for current mode is 0.1% of the output current plus X mA, where the value for X will be found in Table 2-1.

SECTION III
OPERATING INSTRUCTIONS

3-1. GENERAL.

3-2. In this section, procedures required to convert a QRS unit to any of its various operating configurations are presented, including remote sensing, voltage- and current-mode programming and series and parallel operation. A list of controls and indicators (Table 3-1), keyed to Figure 3-1, is also provided.

3-3. VOLTAGE-MODE OPERATION.

3-4. LOCAL SENSING. All models in the QRS series are shipped ready for use with local sensing, i.e., sensing point is at the output terminals. If variations in load-lead drops are expected to be high relative to unit's specified regulation, use remote sensing (para 3-6).

3-5. To operate unit in local sensing, proceed as follows:

a. To set current-limit value, short unit output terminals, set PWR switch to ON, and METER switch to A, and use AMPS control to adjust current-limit value, indicated on ammeter.

b. Set PWR switch to off, remove short and set METER switch to V.

c. Apply input power, and rotate coarse and fine VOLTS controls to obtain desired output. Set PWR switch to off.

d. Observing polarity, run load leads to either front or rear output terminals (at rear terminals, link should be fitted between binder screw head and lead); then reapply input. Unit supplies power to load, with output voltage regulated at unit terminals.

3-6. REMOTE SENSING. If variations in load-lead voltage drops are high when compared with unit's specified regulation, it may be desirable to use remote sensing. To adapt unit for remote-sensing operation, follow procedures outlined in 3-5, but before setting PWR switch to ON, remove links between terminals 3 and 4, and 5 and 6 (Figure 3-2). Then connect sensing leads, observing polarity. Use coaxial cable or a twisted pair of wires for sensing leads and make certain that leads are firmly connected, both at unit terminals and load. Current in the sensing leads is below 100 mA. In remote-sensing operation, transient-response characteristics may degenerate slightly. If unit's response is a critical factor, remove link between terminals 2 and 3, and connect a capacitor, equivalent to C19, across the load terminals. Unit will then meet its transient response specifications.

Figure 3-1. Controls and Indicators

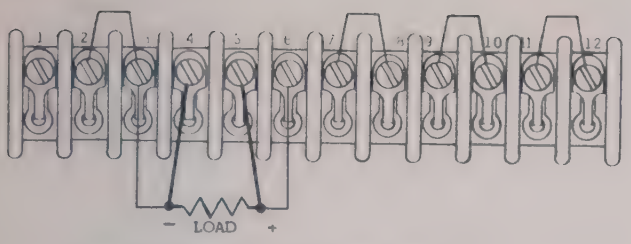

Figure 3-2. Remote Sensing

3-7. REMOTE PROGRAMMING. In voltage-mode, remote-programming operation, unit output voltage is controlled by external resistance or voltage-signal commands.

3-8. Resistance. If the output voltage is to be controlled by resistance programming, calculate the resistance required using the ratio of 100 ± 0.5 ohms/volt, i.e., for every volt of output desired approximately 100 ohms are required. In selecting a programming resistor, choose one with a low temperature coefficient (± 20 ppm/°C) and a wattage ten times that calculated (programming current is 10 mA). Note that resistance programming may also be used to improve a unit's drift characteristic. For example, if a fixed output is required, a fixed resistor may be selected. This would eliminate the variable contact resistance with is inherent in any potentiometer and which contributes to the drift characteristics. If abrupt changes in output voltage are to be made by switching the programming resistance, use a make-before-break switch.

3-9. To adapt unit to resistance programming, proceed as follows:

a. Short unit output terminals, set PWR switch to ON and METER switch to A, and then use AMPS control to adjust current-limit value.

b. Set PWR switch to off, remove short and set METER switch to V position.

c. Rotate VOLTS controls fully counterclockwise.

CONTROL/INDICATOR	FUNCTION
PWR Switch	A 10 A, 250 Vac, double-pole, single-throw switch (connected as a SPST). Used to connect or disconnect power to or from the primary of transformer T1.
Volt-Ammeter	A dual-function meter which indicates output voltage or current depending on position of METER switch.
PWR Light	A red lamp which glows when power is applied to the primary of transformer T1.
METER Switch	A 250 Vac, double-pole, double-throw switch. Used to select meter function.
VOLTS Control	A dual, tandem potentiometer which provides both fine and coarse control of the output voltage during the voltage-mode operation. Connected in the voltage programming circuit. Also used to set compliance range in current-mode operation.
AMPS Control	A 1.2 k ohm potentiometer connected in the current-programming circuit and providing control over the output current with unit in curren'-mode operation. Also used to set current limit in voltage-mode operation.

Table 3-1. Controls and Indicators

d. Remove link between terminals 11 and 12, and connect programming resistor (see Figure 3-3). Use twisted or shielded wire for leads.

CAUTION

Operating the unit with open programing leads or links will result in high output voltage.

e. Remove links between terminals 3 and 4, and 5 and 6. Observing polarity connect load leads to terminals 4 and 5. If output is to be remote-sensed, run sensing leads from terminals 3 and 6 to the load. If remote sensing is not to be used, reinstall links between terminals 3 and 4, and 5 and 6 with link fitted between binder screw head and load lead.

f. Set PWR switch to ON. Unit supplies programmed voltage.

Note

With programming resistor connected across terminals 11 and 12, VOLTS control remains in circuit. Rotation of this control will alter programmed voltage. If this is an undesirable feature, connect resistor across terminals 3 and 11 to effect complete bypass.

3-10. Voltage Signal. Procedures for adapting a unit to voltage-signal programming are identical to those given in para 3-9, with one exception: instead of connecting a programming resistance across terminals 11 and 12, connect the signal-generating device. Volt/volt coefficient is 1, i.e., for every volt of output desired, one volt of signal must be applied. In selecting a programming device, use one that is floating (ungrounded), is capable of absorbing the 10 mA programming current and produces a low-noise, low-ripple signal. For common input-output connections, signal generator can be installed in series with an external programming resistor between terminals 3 and 11. See Figure 3-4.

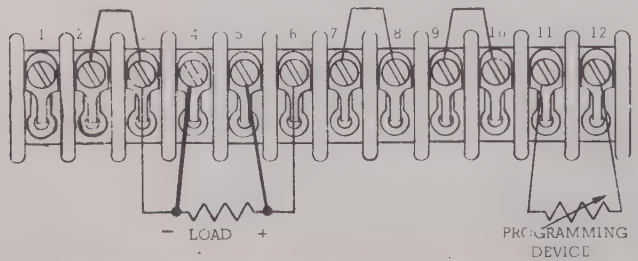

Figure 3-3. Voltage-Mode Programming (with Remote Sensing)

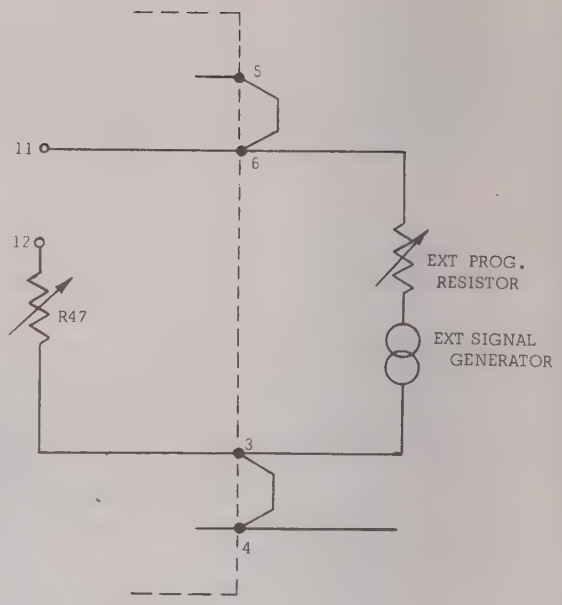

Fig. 3-4. Voltage-Signal Common Input-Output Connections

3-11. CURRENT-MODE OPERATION.

3-12. To operate a QRS unit in the current-mode, proceed as follows:

a. Rotate all front-panel controls fully counterclockwise.

b. Short the output terminals.

c. Rotate fine VOLTS control clockwise, set METER switch to A position and close PWR switch.

d. Turn AMPS controls clockwise to select the desired output current.

e. Open PWR switch, set METER switch to V and remove short from output terminals.

f. Set PWR switch to ON and adjust output voltage, using VOLTS control, to desired compliance setting.

g. Open PWR switch, and observing polarity, connect load to terminals 4 and 5. Reapply input power.

Note

If compliance voltage exceeds VOLTS control setting, crossover to voltage-mode operation occurs automatically.

3-13. REMOTE PROGRAMMING. In current-mode, remote-programming operation, the regulation output current may be controlled externally by resistance changes or voltage signals.

3-14. Resistance. For resistance programming, calculate the value of resistor required by using the ohms/ampere coefficient listed by Model in Table 1-1. Use a resistor with a low temperature coefficient (±20 ppm/°C), and a wattage rating at least ten times calculated value (programming current is approximately 1 mA).

3-15. To adapt unit for current-mode resistance-programming operation, proceed as follows:

a. Close PWR switch, set METER switch to V position and adjust output voltage to desired compliance setting.

b. Oper PWR switch, set METER switch to A position and rotate AMPS control fully counterclockwise.

c. Remove link between terminals 7 and 8, and connect in programming resistor.

CAUTION

Operating unit with open programming leads or links will result in high output current with possible crossover to voltage mode. If step changes in output current are to be made by abrupt resistance alterations, use make-before-break switching.

d. Run load leads to terminals 4 and 5, observing polarity.

e. Set PWR switch to ON. Unit supplies regulated programmed current to the load.

Note

Any rotation of the AMPS control will alter the output current.

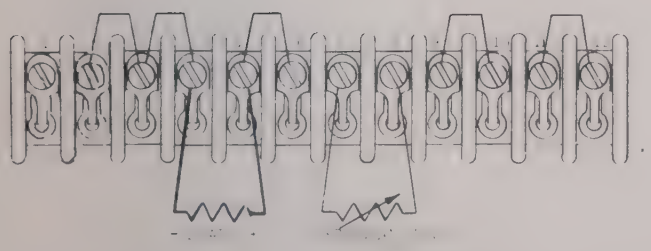

Figure 3-5. Current-Mode Programming

3-16. Voltage Signal. To adapt a QRS unit to voltage-signal programming, follow procedures outlined in para 3-15 with this exception: connect signal-producing device across terminals 7 and 8, instead of the programming resistor. The volt/ampere coefficients are listed by Model in Table 1-1. The programming device should be floating (ungrounded), be capable of absorbing the 1 mA programming current, and have a low-noise, low-ripple output signal.

3-17. SERIES OPERATION.

3-18. For applications which require voltages higher than a single QRS model can provide, use series operation. Maximum rated output of any series connected system is 200 Vdc. System regulation is the sum of the regulations for all units.

3-19. To protect a unit's output capacitor in the event that a failure results in a reverse voltage being applied across unit terminals, connect external rectifiers as shown in Figure 3-6. Rectifiers recommended for series operation are listed in Table 3-2. (Models QRS 40-.75 and 60-.5 do not require external rectifiers).

3-20. To connect units in series proceed as follows:

a. Adjust output voltage of each unit so that their sum is equal to the desired system output. Set PWR switches of both units to off.

b. Remove links between terminals 3 and 4, and 5 and 6, on both units.

c. Connect load leads as shown in Figure 3-6. Observe polarity.

d. Run sensing leads from unit to load, observing polarity. Wherever possible, use twisted or shielded leads. At load and unit terminals, place sensing leads between binder-screw head and load lead.

e. Set PWR switches to ON. System supplies desired regulated voltage.

3-21. PARALLEL OPERATION.

3-22. Parallel operation may be used to obtain currents greater than any single Model can supply. The maximum rated output of any parallel-connected system is the sum of the maximum outputs of each unit derated to 90%.

QRS MODEL	MANUFACTURER	MANUFACTURER'S PART NO.	SORENSEN'S PART NO.
30-1	Solitron	HC 67	26-1027-3
60-1.5	Solitron	2A100	26-1002-4
40-2	Solitron	2A100	26-1002-4
15-2	Solitron	2A50	26-1002-3
20-4	Motorola	MR 1030A	26-1006-1

Table 3-2. Recommended Rectifiers, Series Operation

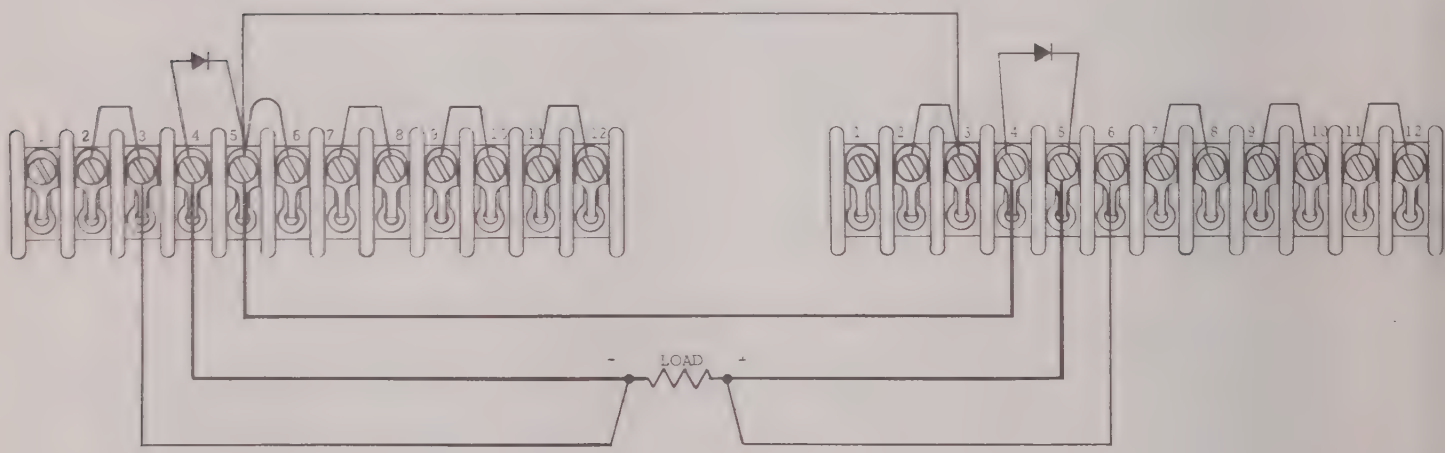

Figure 3-6. Series Operation

3-23. To connect two units in parallel (extend procedure to hook up additional units), proceed as follows:

a. Apply nominal input power to master unit (see Figure 3-7), adjust output voltage to desired load voltage and then set PWR switch to off.

b. Short the master unit's output terminals, apply input power and adjust output current to I_{so}/X, where I_{so} is the system output current and X is the number of units in system. Remove input power.

c. At slave unit, remove link across terminals 9 and 10, and then reconnect a lead from terminal 9, slave unit, to terminal 9, master unit.

d. Observing polarity, run leads from load to terminals 4 and 5, on both units. If remote sensing is desired, connect coaxial cable or a twisted pair of wires from terminals 3 and 6 to the load, again observing polarity.

e. Set PWR switches of both units to ON.

Note

If the output of any unit drops to zero either through an internal failure or by opening a PWR switch, the output of entire system will go to zero.

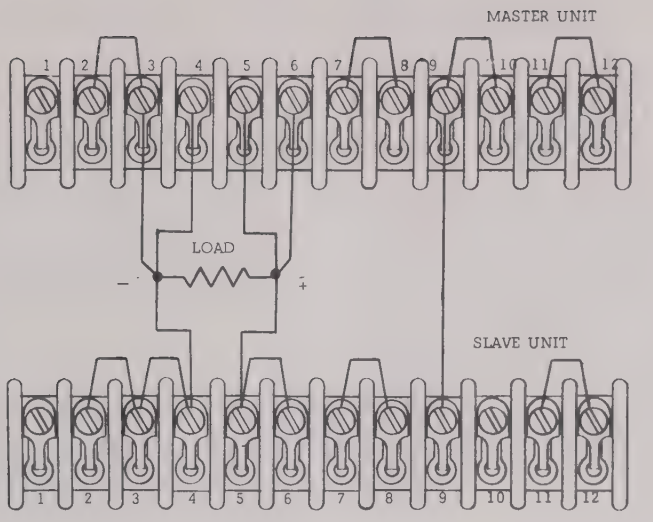

Figure 3-7. Parallel Operation
(with Remote Sensing)

SECTION IV
PRINCIPLES OF OPERATION

4-1. GENERAL.

4-2. This section discusses the basic theory of series-pass regulation, describes the block functions of various circuits and then details the operation of each circuit. If used as a supplement to the troubleshooting data provided in Section V, it will aid in the rapid, logical isolation of unit faults. Schematic locations of the reference designations used throughout this section will be found in Figure 5-3.

4-3. SERIES-PASS PRINCIPLE.

4-4. The QRS utilizes the series-pass principle to regulate unit output. With this approach, a variable impedance absorbs the difference between the filtered "brute-force" dc and the desired output voltage in the voltage-mode and the compliance voltage in the current-mode. The variable impedance is provided by a number of transistor stages, connected in parallel, all of which react simultaneously to an output-related control signal. Operation of the transistors, which are called passing stages, is idealized in Figure 4-1.

4-5. BLOCK-DIAGRAM DISCUSSION.

4-6. The following discusses in a general manner the internal operation of a QRS. A more detailed treatment of the various sections is presented in subsequent paragraphs. Refer to Figure 4-2: the a-c power is stepped down by the input transformer and applied across a full-wave bridge rectifier. Output from the rectifier is filtered, fed through the passing stages, and applied across the output terminals. This passing stage is, of course, the regulating device absorbing the difference between the unregulated d-c and the desired or compliance voltages. In voltage-regulating operation, the voltage-mode section senses the output voltage, develops and amplifies error signals, and feeds these signals through a number of drivers to the passing stages. In current-regulating operation, the current-mode section monitors the output current through a sensing resistor and regulates the voltage developed across the resistor by applying control signals to the drivers and consequently the passing stage. Unregulated supplies provide reverse-bias voltage to the passing stages and forward bias for the current-mode differential amplifiers.

4-7. REFERENCE SUPPLY.

4-8. The precisely regulated voltage required for output comparison and error-signal development is provided by a reference supply consisting of an unregulated supply (T1, CR1 and CR4), filter capacitor (C1), an error bridge (R5, R9 and CR5), two double-differential amplifiers (Q4, Q5 and Q2, Q3) and a low-power passing stage (Q1). Resistor (R2) is a starting resistor, i.e., at turn on, it shunts current across the passing stage to allow the reference supply to start functioning.

4-9. In general, the supply operates as follows: the precise reference voltage developed by zener diode (CR5) is compared with a portion of the output voltage developed across R9. Error signals

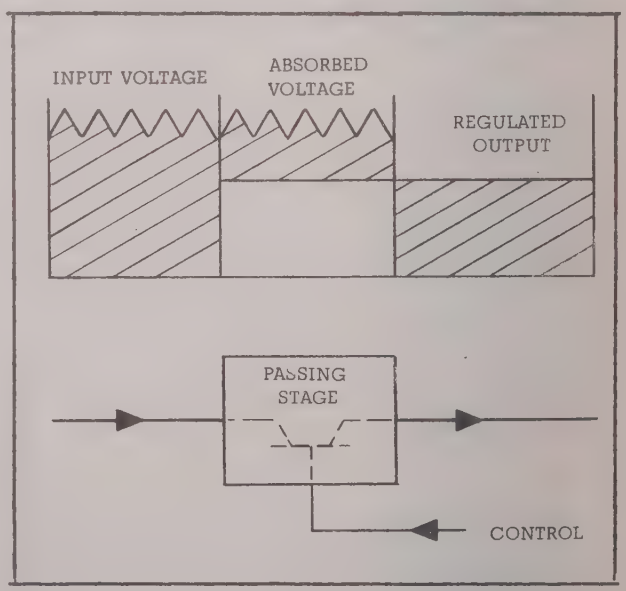

Figure 4-1. Series-Pass Principle

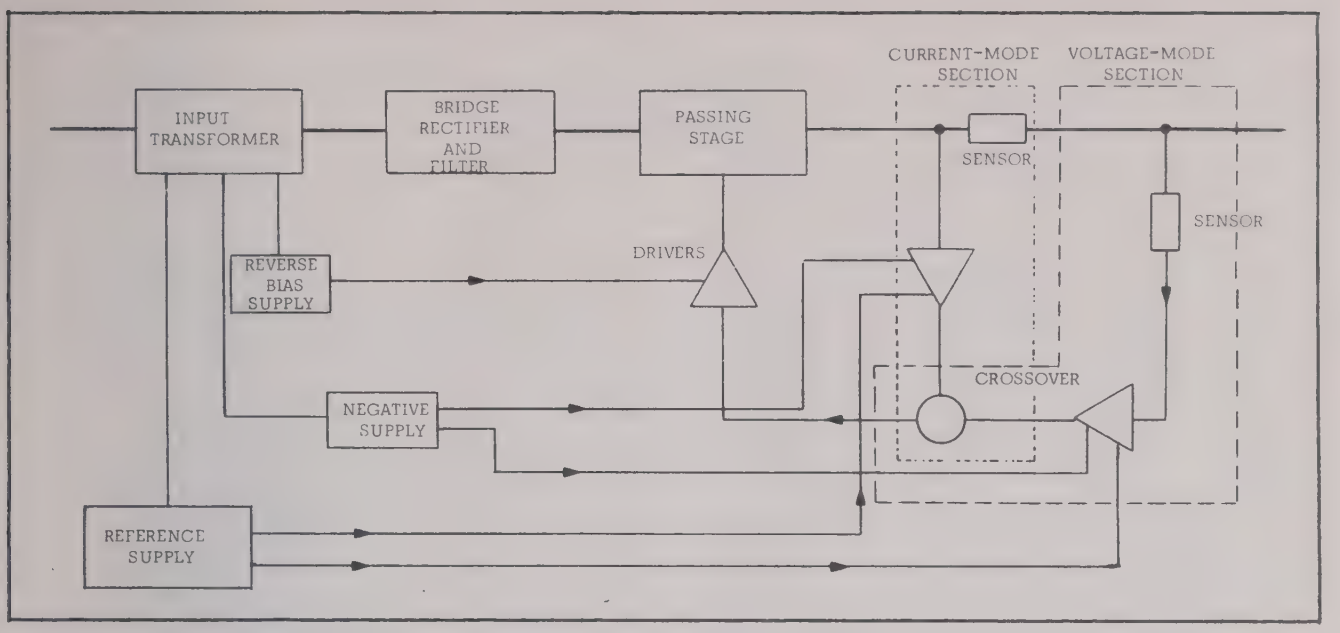

Figure 4-2. Block Diagram

which develop are amplified first by differential amplifier (Q4,Q5) and then by amplifier (Q2,Q3). The amplified signal is then applied to the base of Q1, where it alters stage impedance and therefore the absorbed voltage.

4-10. As a specific example of circuit operation, assume that, as a result of an input line change, supply output voltage starts to increase. The voltage across R9 will then increase, and the base of Q5 will become more positive with respect to Q4's base. Q5 will then conduct more current and Q4 less. (Note that the sum of the currents through Q4 and Q5 is held constant by the zener voltage across R7.) With an increase in current, the voltage developed across R8 increases, while that across R6 decreases. Q2's base will therefore become more negative with respect to the base of Q3. As a result, Q2 will conduct less current, and the drive on Q1 will diminish. Q1 will increase its absorbed voltage, thereby regulating the output to a precise 8.9 volts.

4-11. VOLTAGE-MODE SECTION.

4-12. The voltage-mode section consists basically of two double-differential amplifiers (Q16, Q17 and Q12, Q13), a constant-current generator (Q18) and sensing string (R26, R47A and B). The section functions to sense unit output voltage, to detect differences between the desired and the actual output voltages, and to convert and amplify these differences into error signals used to control passing-stage (Q21) impedance.

4-13. To clarify circuit operation, a specific example is given. Suppose that, as a result of a load change, the output voltage begins to increase. The increase is sensed across R47A and B, and Q16's base becomes more negative with respect to the base of Q17. Current through Q16 decreases while that through Q17 increases. (The sum of Q16's and Q17's operating currents is fixed by constant-current generator Q18, R31, CR11, CR12). The decreasing current through R28 lowers the voltage across R28 while that across R30 increases. As a result, Q12's base becomes less negative with respect to the base of Q13, and Q12's operating current decreases. Now this operating current is, in fact, the signal current to the drivers and passing stages, and any changes in it are reflected in changes in passing-stage impedance and consequently output voltage. Therefore, a decrease in signal current, resulting from an increase in output voltage, increases passing-stage impedance to reduce the output to the desired voltage.

4-14. CURRENT-MODE SECTION.

4-15. The current-mode section serves two functions. In constant-voltage operation, it protects the load from excessive currents by limiting action, and in constant-current operation, it regulates the output current to the desired value. Main components include differential amplifiers (Q6, Q7 and Q9, Q10), sensing resistor (R40), switch (Q14), and potentiometer (R22A). Potentiometer (R14) is a calibration resistor used to adjust amplifier (Q9, Q10) zero-set point.

4-16. Basically the section functions as follows: The voltage across sensing resistor (R40), developed by the load current, is compared to a fixed reference. This reference is derived from the 8.9-V regulated supply. Error signals which develop are amplified first by Q9,Q10 and next by Q6, Q7. The amplified signals are then applied to the base of switch Q14. Q14 then functions as a variable impedance to control the signal from the voltage-mode section to the drivers and passing stages. It should be noted that the signal from the voltage-mode section is at full strength and that, in voltage-mode operation, Q14 is saturated.

4-17. As a specific example of current-mode-section operation, suppose that the load current begins to drop below the setting of the output current adjust (R22A). The voltage across R40 decreases, and Q9's base becomes more negative with respect to the base of Q10. The operating current through Q9 increases, and more voltage builds up across R18. As a result, the base of Q6 becomes more positive with respect to Q7's base. The operating current through Q6 will then increase while that through Q7 decreases. As a result, the voltage developed across R12 drops, and the drive on Q14 increases. Q14's impedance will decrease, and the signal current to the drivers and passing stages will be greater. Consequently, passing stage impedance decreases, and output current increases to the regulator setting.

4-18. DRIVERS AND PASSING STAGES.

4-19. Basic components in the drivers and passing stages include transistors Q19, Q20, and Q21. Driver Q19 amplifies the signal produced by either the voltage- or current-mode sections, and applies it to Q20's base for further amplification. The amplified signals are then applied to the passing stages' bases where they act to alter stage impedance, thereby controlling the output voltage or current. Resistors (R38) assure equal current sharing by the passing stages.

4-20. REVERSE-BIAS SECTION.

4-21. The reverse-bias section functions (1) during "load-off" transients to improve response time by rapidly cutting off the passing stages and (2) to absorb "thermal-effect" current generated by high-junction temperature. The section is comprised of two unregulated supplies and a number of biasing resistors. A secondary of transformer (T1), rectifiers (CR17 and CR18), and capacitor (C14) form a supply which feeds reverse bias through resistors (R36 and R37) to transistors (Q20 and Q21). A half-wave, center-tapped rectifier (CR19) and filter capacitor (C12) supply reverse bias to Q19 through resistor (R34). Resistor (R39) serves as pre-load.

4-22. METER SECTION.

4-23. The meter section consists basically of volt-ammeter (M1), selector switch (S2), voltage-sampling resistors (R44, R45), current-sensing resistor (R43), calibration potentiometer (R42), and resistor (R41). With switch (S2) in the V position, meter (M1) is placed across voltage-sampling resistor (R45) and, in the A position, is across current-sensing resistor (R43).

4-24. STABILIZATION.

4-25. A tendency toward instability under certain operating conditions is inherent in the operation of any high-gain feedback amplifier. To preclude unstable operation, the QRS's have been equipped with a number of stabilization networks and capacitors. In the voltage-mode section, these include networks C17-R46, C11-R29, and C10-R24 and capacitor C8. The current-mode section incorporates network C7-R15 and capacitor C9. Network C4-R3 and capacitor C3 are used in the reference supply, and capacitors C15, C16 stabilize drivers Q19, Q20.

4-26. INPUT-POWER SECTION.

4-27. The input-power section accepts the a-c input, steps down the voltage through transformer T1, and applied it to a full-wave bridge rectifier. Rectifier output is capacitor filtered before being supplied to passing stages. Main components include transformer (T1), rectifiers (CR13-CR16) and capacitor (C13). The input line includes a fast-blow fuse (F1) and a toggle switch (S1). Resistor (R35) serves as a bleeder. The two primaries of T1, normally connected in parallel for 115 Vac operation, may be placed in series for 220/230 volt operation. The power-indicating light is connected across a primary winding of transformer T1.

SECTION V
MAINTENANCE

5-1. GENERAL.

5-2. This section provides troubleshooting data, periodic-servicing information, and calibration procedures. The troubleshooting data should be used in conjunction with both the schematic diagram (Figure 5-3), which gives voltage-check points, and Section IV, which outlines the principles of operation. Figures 5-1 and 5-2 physically locate the parts appearing on the schematic. Any questions pertaining to repair should be directed to the nearest Sorensen representative (a list is included with the unit) or to the Service Dept., Raytheon Company, Sorensen Operation, Richards Avenue, Norwalk, Conn. 06856. Include the model and serial numbers in any correspondence. Should it be necessary to return a unit to the factory for repair, authorization from the Sorensen Service Dept. must be obtained first. Raytheon Company will not assume responsibility for units returned without prior authorization.

5-3. PERIODIC SERVICING.

5-4. Units in the QRS Series require no periodic servicing. However, it is recommended that whenever a unit is removed from the line it be cleaned. Use naptha, or an equivalent solvent, on painted surfaces. Wash front panel with a weak solution of soap and warm water. Use compressed air at a pressure of 5 psi to blow dust from in and around parts.

5-5. TROUBLESHOOTING.

5-6. Table 5-1 provides a list of malfunction symptoms along with a tabulation of the possible cause or causes for each symptom. Note that the failure of one component may result in a "chain reaction" effect. For example, if one or more of the passing stages (Q21) opens, the remainder of the Q21's may become overloaded and subsequently fail. In a like manner, if a diode in one of the four, full-wave rectifiers fails, its complementary rectifier and the main transformer may be damaged.

5-7. The data listed in Table 5-1 are based on prototype reliability studies, not on actual solutions to field problems, and therefore may be incomplete. Where the probable cause for a symptom lists a transistor short, it is either a base-collector, emitter-collector or base-emitter-collector short. Base-emitter shorts may give an entirely different set of symptoms. It is therefore recommended that before a particular section is checked for failures, each transistor within the section be tested for base-emitter shorts. (Normal base-emitter voltage is approximately 0.6 V.)

5-8. CALIBRATION.

5-9. Following the replacement of any differential-amplifier components, recalibration is recommended. Differential amplifiers are used in the reference supply, current-mode and voltage-mode sections. If any of the internal adjustment potentiometers are replaced, recalibration is required.

5-10. To calibrate any model in the QRS Series, proceed as follows:

a. On component board, turn potentiometers R9, R14 and R42 to midpoint in rotation range.

b. Turn fine VOLTS control fully counter-clockwise.

c. Rotate coarse VOLTS and AMPS controls to approximately midrange.

d. At rear terminal board, remove link between terminals 11 and 12, and connect a precision resistance box, $\pm$ 0.1% accuracy, between terminals 11 and 3. Set resistance exactly to that value specified in row A, Table 5-2. Assure that leads are firmly connected both at terminal board and at box.

e. Connect a precision voltmeter (Fluke or equivalent) across rear output terminals.

f. With 105 to 125 Vac at 60 Hz applied to input, set POWER switch to ON. Pilot light should glow.

g. Set METER switch to V position.

h. Adjust potentiometer R9 to obtain output voltage specified in row B, Table 5-2. Apply

	SYMPTOM		PROBABLE CAUSE
I.	No Output - Current or Voltage Modes	a.	Check external a-c input and position of PWR switch.
		b.	Check for blown fuse F1*.
II.	Low or No Output - Voltage Mode	a.	Check output of 8.9V supply at C6. If output is low, try to adjust with R9 and then if necessary, check for open Q1, Q2, or Q4, or shorted Q5 or Q3.
		b.	Place a short across transistor Q14. If trouble persists, go to "c" and "d". If symptom disappears, remove short and check for shorted Q10, Q7 or Q14 b-e short. Test for Q9 or Q14 open.
		c.	In voltage-mode section, test for open Q16, Q18 or Q12 or shorted Q17, Q13.
		d.	If drivers and passing stages, check for open Q19, Q20 or Q21.**
III.	High Output - Voltage Mode	a.	Check reference supply output. Should be ripple-free 8.9 Vdc. If output is high, attempt to adjust with R9. If adjustment is not possible, check for shorted Q2, Q4 or Q1. Test for open Q5 or Q3.
		b.	In voltage-mode section, check for open Q17 or shorted Q16 or Q12.
		c.	Check for shorted Q19, Q20 or Q21** in drivers and passing stages.
IV.	Low Output - Current Mode	a.	In current-mode section, Q6 open, or Q10 or Q7 shorted.
V.	High Output - Current Mode	a.	In current-mode section, Q10 or Q7 open, or Q6 or Q9 shorted.
VI.	In Voltage Mode, Output Oscillates (sawtooth)		Q5 defective
VII.	In Voltage Mode, Regulation and ripple slightly outside the specification		Q13 defective
VIII.	No crossover from voltage mode to current mode		Q14 or Q15 shorted

* Repetitive fuse blowing is indicative of shorting in either the input transformer or secondary-side rectifiers.

** When replacing Q20 or Q21, coat underside of transistor and heat sink mounting surface with a few drops of silicone oil (Silicone Fluid 200, Dow Corning Co., Midland Michigan).

Table 5-1. Troubleshooting Data

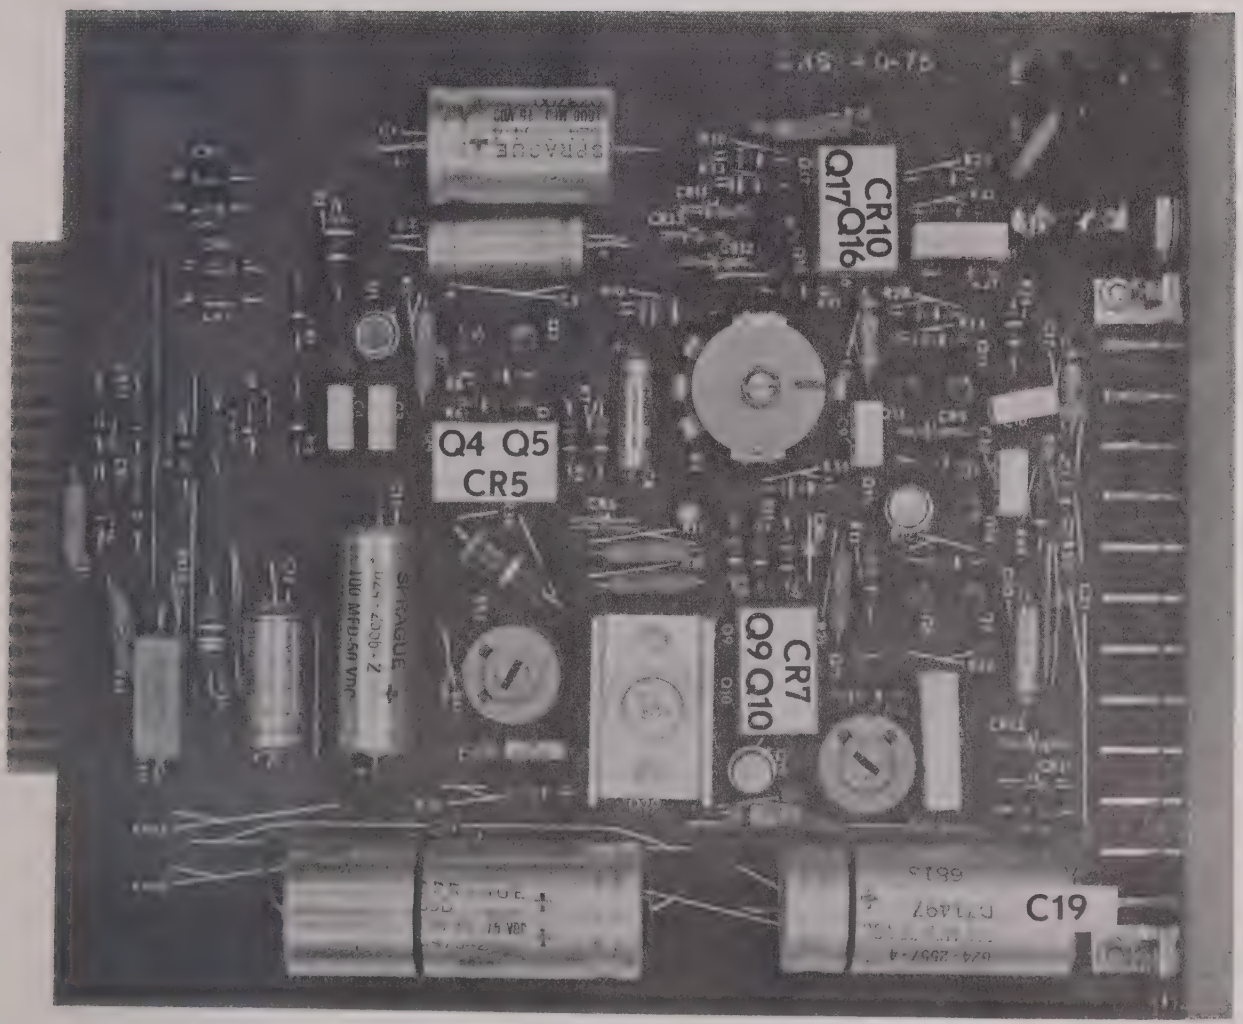

Figure 5-1. Component Board

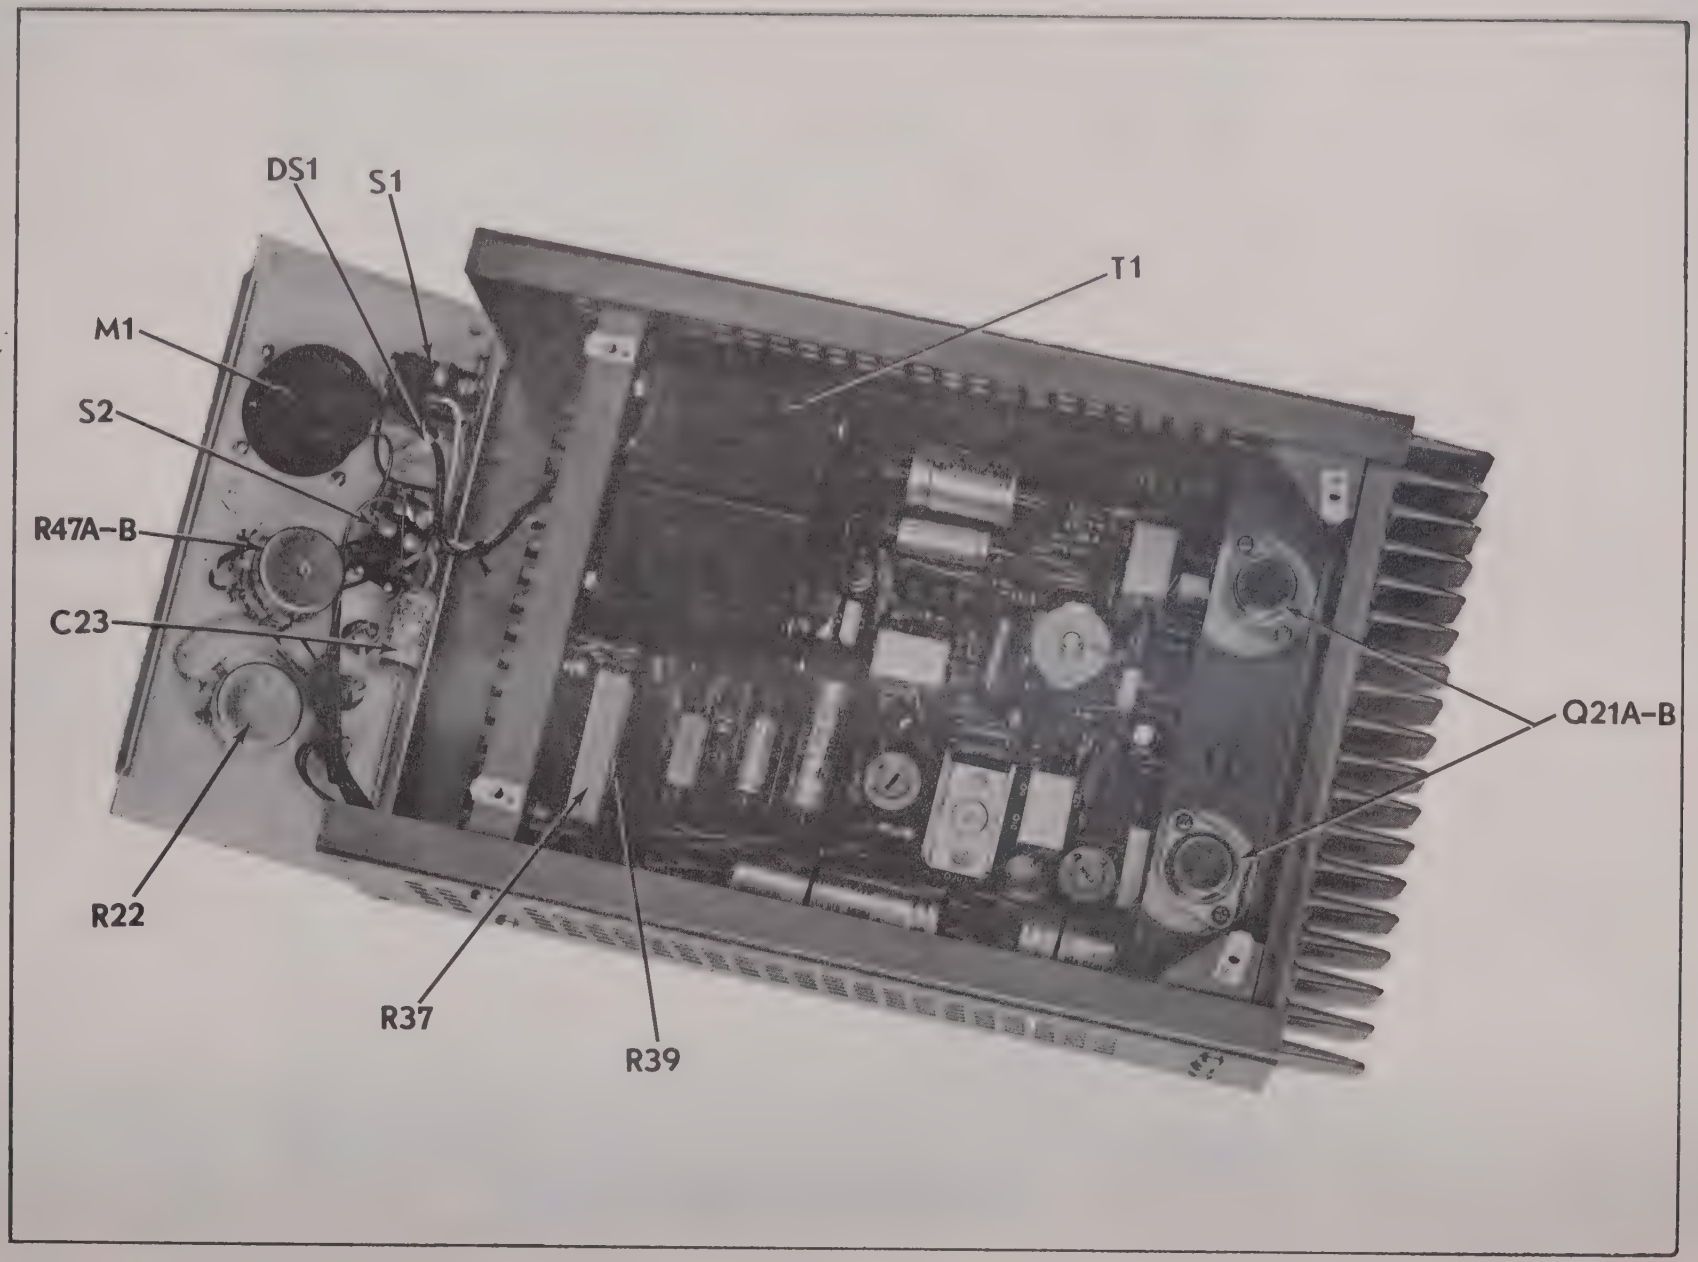

Figure 5-2. Typical Partial Disassembly

MODEL	VOLTAGE		
	A	B	C
15-2	21	31	19
30-1	42	53	39
40-.75	49	71	46
60-.5	69	98	67
20-4	25	36	22
40-2	49	66	46
60-1.5	69	88	67

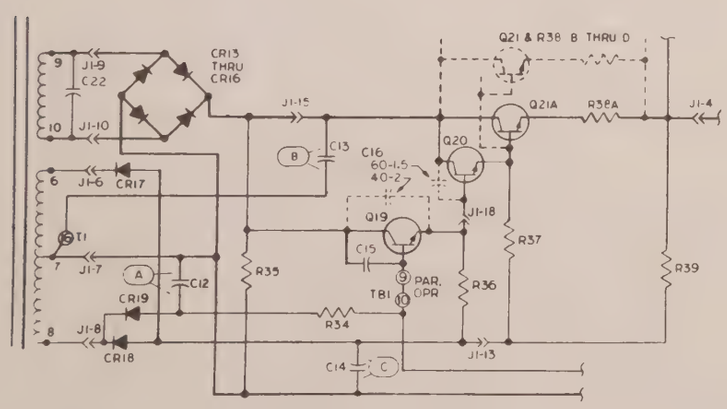

POWER CIRCUIT MODELS QRS40-2 & 60-1.5

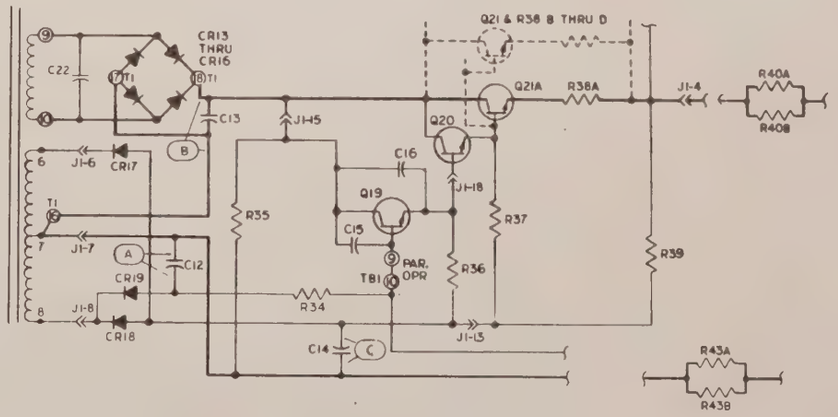

POWER CIRCUIT MODEL QRS20-4

NOTES

1. ALL VOLTAGES MEASURED AT NO LOAD, FULL OUTPUT VOLTAGE AND NOMINAL INPUT.
2. ① DENOTES FRONT-PANEL CONTROL.
3. SEE FIG. 2-3 FOR INPUT-CONNECTION DETAILS.

FIGURE 5-3 SCHEMATIC DIAGRAM

	QRS MODELS						
	15-2	30-1	40-.75	60-.5	20-4	40-2	60-1.5
A (ohms)	1500	3000	4000	6000	2000	4000	6000
B (Vdc)	15 ± .052	30 ± .105	40 ± .140	60 ± .210	20 ± .070	40 ± .140	60 ± .210
C (Vdc)	0.15	0.3	0.4	0.6	0.2	0.4	0.6
D (mA)	10	6	6	6	10	10	10
E (A)	2.0	1.0	0.75	0.5	4.0	2.0	1.5
F (A)	2.2	1.1	0.825	0.55	4.4	2.2	1.65

Table 5-2. Calibration Data

locking compound to R9.

i. Set PWR switch to off, disconnect resistance box, and reinsert link between terminals 11 and 12.

j. Set PWR switch to ON, and rotate coarse VOLTS control fully clockwise. Voltmeter should indicate at least the maximum voltage specified in row B. Turn coarse VOLTS control to midpoint.

k. Turn fine VOLTS control from stop-to-stop. Range of output control is specified in row C, Table 5-2.

l. Set PWR switch to off, and disconnect voltmeters from output terminals.

m. Rotate AMPS control fully counter-clockwise, and connect a 10-mA ammeter in series with the equivalent of full load and across the output terminals.

n. Set PWR switch to ON, and adjust potentiometer R14 to obtain current between 0 and that specified in row D, Table 5-2. Apply locking compound to R14.

o. Switch test ammeter's range to one compatible with unit's rated output, and set METER switch to A position.

p. Rotate AMPS control until test ammeter indicates rated output current, row E, Table 5-2.

q. Adjust potentiometer R42 until ammeter indicates current equal to that indicated on test ammeter. Apply locking compound to R42.

r. Turn AMPS control fully clockwise, and increase load until unit starts current limiting, i.e., output current is held constant, while voltage varies. Current limit value should be greater than that specified in row F, Table 5-2. Set PWR switch to off, and disconnect external ammeter and load.

5-11. PERFORMANCE TESTING.

5-12. If it is desired to check unit performance following repair and calibration, refer to para 2-19, Specification Verification.

SECTION VI
REPLACEMENT PARTS LIST

6-1. GENERAL.

6-2. This section provides a replacement parts list for the QRS Series. The list is keyed to both the parts-locating photographs (Figure 5-1, and 5-2) and the schematic diagram (Figure 5-3).

6-3. MANUFACTURER CODING.

6-4. The column headed MANUFACTURER CODE contains a listing of letter designators which, when applied to the tabulation that follows, will give the manufacturer from whom a particular item may be purchased. If no manufacturer's part number is listed in the MANUFACTURER PART NO. column, the part may be ordered from the indicated manufacturer by using the Sorensen part number and a complete description of the item.

AB	Allen Bradley Company
AX	Aerovox Corp.
CH	Cutler-Hammer, Inc.
CS	Clarostat Manufacturing Co., Inc.
FC	Fairchild Semiconductor
GE	General Electric Co.
ID	Industrial Devices, Inc.
IRC	International Resistance Co.
LF	Littlefuse Co.
MA	Motorola Semiconductor Products
OM	Ohmite Manufacturing Co.
RCA	Radio Corporation of America
RT	Raytheon Company
SC	Semicon, Inc.
SM	Semitech, Inc.
SP	Sprague Electric Company
SR	Sorensen Operation, Raytheon Co.
ST	Solitron Devices, Incorporated
WL	Ward Leonard Electric Co.

6-5. ORDERING PARTS.

6-6. When ordering parts from Raytheon Co., Sorensen Operation, include manufacturer's part number, the Sorensen part number and the unit model number. Address orders to:

Raytheon Company
Sorensen Operation
Richards Avenue
Norwalk, Connecticut 06856

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
C1	x	x	x	x	x	x	x	Cap., 1 mF, 15 Vdc	24-2554-4		*
C2	x	x	x	x	x	x	x	Cap., 250 µF, 25 Vdc	24-2552-3		AX
C3	x	x	x	x	x	x	x	Cap., 15 nF, 250 Vdc	24-2015-3		SC
C4	x	x	x	x	x	x	x	Cap., 33 nF, 250 Vdc	24-2015-7		SC
C6	x	x	x	x	x	x	x	Cap., 25 µF, 25 Vdc	24-2552-1		AX
C7	x	x	x	x	x	x	x	Cap., 470 nF, 25 Vdc	24-2015-21		SC
C8	x	x	x	x	x	x	x	Cap., 2.2 nF, 200 Vdc	24-2409-3		AX
C9,10,18	x	x	x	x	x	x	x	Cap., 68 nF, 200 Vdc	24-2015-11		SC
C11	x	x	x	x	x	x	x	Cap., 220 nF, 250 Vdc	24-2015-17		SC
C12	x	x	x	x	x	x	x	Cap., 50 µF, 70 Vdc	24-2553-4		AX
C13	x							Cap., 2.5 mF, 30 Vdc	24-2449-3		SP
		x						Cap., 4.7 mF, 40 Vdc	24-2460-2		≠
			x	x				Cap., 1 mF, 75 Vdc	24-2457-3		SP
					x			Cap., 1.65 mF, 75 Vdc	24-2525-6		≠
						x		Cap., 250 µF, 100 Vdc	24-2463-2		SP
							x	Cap., 1.2 mF, 150 Vdc	24-2466-2		::
C14	x	x						Cap., 250 µF, 25 Vdc	24-2552-3		AX
			x	x				Cap., 100 µF, 50 Vdc	24-2556-2		*
					x		x	Cap., 200 µF, 75 Vdc	24-2557-3		*
						x		Cap., 50 µF, 70 Vdc	24-2553-4		AX
C15	x	x	x	x	x	x	x	Cap., 1 nF, 200 Vdc	24-2409-1		AX
C16	x	x	x	x	x	x	x	Cap., 4.7 nF, 200 Vdc	24-2409-5		AX
C17	x	x						Cap., 4.7 nF, 200 Vdc	24-2409-5		AX
			x					Cap., 3.3 nF, 200 Vdc	24-2409-4		AX
				x	x			Cap., 2.2 nF, 200 Vdc	24-2409-3		AX
						x	x	Cap., 1.5 nF, 200 Vdc	24-2409-2		AX
C19	x							Cap., 650 µF, 25 Vdc	24-2555-6		*
		x						Cap., 2.5 mF, 30 Vdc	24-2449-3		*
			x	x		x		Cap., 500 µF, 75 Vdc	24-2557-4		*
					x			Cap., 1.5 mF, 50 Vdc	24-2556-6		*
							x	Cap., 1 mF, 75 Vdc	24-2557-6		*
C20	x	x	x	x	x	x	x	Cap., 5 µF, 70 Vdc	24-2553-1		AX

* May be ordered from either P.R.Mallory & Co.,Inc., Sangamo Electric Co., or Sprague Electric Co.
≠ May be purchased from either Sprague Electric Co., Cornell Dubilier Electronics or Aerovox Corp.
:: May be procured from either Sprague Electric Co., General Electric Co., or Aerovox Corp.

Table 6-1. Replacement Parts List (Sheet 1 of 6)

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
C22	x							Cap., 220 nF, 200 V	24-2409-15		AX
		x						Cap., 680 nF, 200 V	24-2409-18		AX
			x	x	x	x	x	Cap., 50 nF, 500 V	24-2010		CB
C23	x	x	x	x	x	x	x	Cap., 330 nF, 200 V	24-2409-16		AX
CR1-4,20	x	x	x	x	x	x	x	Rectifier	26-158-1	CER 68	ST
CR5,6	x	x	x	x	x	x	x	Diode, Zener	26-211	1N750A	MA
CR7,9-12, 21-23	x	x	x	x	x	x	x	Diode	26-1017	RD 9119	RT
CR13-16	x							Rectifier	26-1065-1	3S05E	SM
		x						Rectifier	26-1006-2	MR 1031A	MA
			x					Rectifier	26-1002-4	2A100	ST
				x				Rectifier	26-1027-5	HC69	ST
					x			Rectifier	26-1026-4	3A100	ST
						x		Rectifier	26-158-2	CER 69	ST
							x	Rectifier	26-1002-5	2A200	ST
CR17,18	x	x						Rectifier	26-158-1	CER 68	ST
			x	x	x	x	x	Rectifier	26-158-2	CER 69	ST
CR19	x	x	x	x	x	x	x	Rectifier	26-158-2	CER 69	ST
DS1	x	x	x	x	x	x	x	Lamp assembly	43-344	2120A1	ID
F1	x		x	x		x		Fuse, 1.5A, 250V, 3AG	42-407	31201.5	LF
		x			x		x	Fuse, 3 A, 250V, 3AG	42-409	312003	LF
M1	x							Meter, V-A, 0-15 V, 0-3A	94-823-4		SR
		x						Meter, V-A, 0-25 V, 0-5A	94-393-9		SR
			x					Meter, V-A, 0-30 V, 0-1.5A	94-823-3		SR
				x				Meter, V-A, 0-50 V, 0-1A	94-823-2		SR
					x			Meter, V-A, 0-50 V, 0-2.5A	94-393-10		SR
						x		Meter, V-A, 0-60 V, 0-.6A	94-823-1		SR
							x	Meter, V-A, 0-80 V, 0-2A	94-393-8		SR

Table 6-1. Replacement Parts List (Sheet 2 of 6)

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
Q1	x	x	x	x	x	x	x	Transistor, PNP	18-146	RT 9338	RT
Q2-7,14, 16-18	x	x	x	x	x	x	x	Transistor, NPN	18-144	2N3641	FC
Q9,10,12, 13	x	x	x	x	x	x	x	Transistor, PNP	18-143	2N3638	FC
Q15	x	x	x	x	x			Transistor, NPN	18-115	2N697	GE
						x	x	Transistor, NPN	18-161-3*		SR
Q19	x	x						Transistor, NPN	18-115	2N697	GE
			x					Transistor, NPN	18-161-4*		SR
				x	x			Transistor, NPN	18-161-3*		SR
						x	x	Transistor, NPN	18-165	40321	RCA
Q20	x	x	x					Transistor, NPN	18-142	40312	RCA
				x	x			Transistor, NPN	18-177-1*		SR
						x	x	Transistor, NPN	18-164	40313	RCA
Q21	x	x	x					Transistor, NPN	18-151	2N3055	RCA
				x	x			Transistor, NPN	18-178-1*		SR
						x	x	Transistor, NPN	18-163	2N3442	RCA
R1,25,27, 32	x	x	x	x	x	x	x	Resistor, 220 ohm, 1/2 W	27-101	EB 2211	AB
R2	x	x	x	x	x	x	x	Resistor, 390 ohm, 1 W	28-703	GB 3911	AB
R3,29,48	x	x	x	x	x	x	x	Resistor, 10 ohm, 1/2 W	27-180	EB 1001	AB
R4,7,23	x	x	x	x	x	x	x	Resistor, 680 ohm, 1/2 W	27-156	EB 6811	AB
R5	x	x	x	x	x	x	x	Resistor, 221 ohm, 1/2 W	28-1188		IRC
R6,8	x	x	x	x	x	x	x	Resistor, 1k ohm, 1/2 W	27-103	EB 1021	AB
R9	x	x	x	x	x	x	x	Pot., 2k ohm, 2 W	29-519		CS
R10	x	x	x	x	x	x	x	Resistor, 330 ohm, 1 W	27-291	GB 3311	AB
R11	x	x	x	x	x	x	x	Resistor, 1.5k ohm, 1/2 W	27-171	EB 1521	AB
R12	x	x	x	x	x	x	x	Resistor, 8,2k ohm, 1/2 W	27-1163	EB 8221	AB
R13	x	x	x	x	x	x	x	Resistor, 3.3k ohm, 1/2 W	27-140	EB 3321	AB
R14	x	x			x			Pot., 50 ohm, 2 W	29-522		CS
			x	x		x	x	Pot., 100 ohm	29-523		CS
R15	x	x	x	x	x	x	x	Resistor, 470 ohm, 1/2 W	27-166	EB 4711	AB

* Selected Parts

Table 6-1. Replacement Parts List (Sheet 3 of 6)

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
R16	x		x			x		Resistor, 150k ohm, 1/2 W	28-1264		IRC
		x			x			Resistor, 499k ohm, 1/2 W	28-1266		IRC
				x				Resistor, 187k ohm, 1/2 W	28-1265		IRC
							x	Resistor, 604k ohm, 1/2 W	28-1267		IRC
R17	x	x	x	x	x	x	x	Resistor, 10 ohm, 1/2 W	28-1257		IRC
R18,19,28, 30	x	x	x	x	x	x	x	Resistor, 2.7k ohm, 1/2 W	27-174	EB 2721	AB
R21	x	x	x	x	x	x	x	Resistor, 7.5k ohm, 1/2 W	28-1258		IRC
R22	x	x	x	x	x	x	x	Pot., dual, 1200/15 ohm, 2 W	29-521		CS
R24	x	x	x	x	x	x	x	Resistor, 390 ohm, 1/2 W	27-1109	EB 3911	AB
R26	x	x	x	x	x	x	x	Resistor, 887 ohm, 1/2 W	28-1216		IRC
R31	x	x	x	x	x	x	x	Resistor, 270 ohm, 1/2 W	27-191	EB 2711	AB
R33	x	x	x	x	x	x	x	Resistor, 3.9k ohm, 1/2 W	27-186		OM
R34	x							Resistor, 15k ohm, 1/2 W	27-179	EB 1531	AB
		x						Resistor, 18k ohm, 1/2 W	27-1119	EB 1831	AB
			x					Resistor, 33k ohm, 1/2 W	27-163	EB 3331	AB
				x	x			Resistor, 39k ohm, 1/2 W	27-167	EB 3931	AB
						x	x	Resistor, 56k ohm, 1/2 W	27-161	EB 5631	AB
R35	x							Resistor, 3.9k ohm, 1/2 W	27-186		OM
		x						Resistor, 1.5k ohm, 5 W.	27-499-10		CS
			x					Resistor, 6.8k ohm, 1/2 W	27-185	EB 6821	AB
				x				Resistor, 22k ohm, 1/2 W	27-142	EB 2231	AB
					x			Resistor, 5.1k ohm, 2 W	27-344	HB 5125	AB
						x		Resistor, 39k ohm, 1/2 W	27-167	EB 3931	AB
							x	Resistor, 8.2k ohm, 2 W	27-392	HB 8221	AB
R36	x	x						Resistor, 3.3k ohm, 1 W	27-292	GB 3321	AB
			x					Resistor, 6.8k ohm, 1 W	27-283	GB 6821	AB
				x	x			Resistor, 8.2k ohm, 2 W	27-392	HB 8221	AB
						x	x	Resistor, 12k ohm, 2 W	27-1180	HB 1231	AB
R37	x							Resistor, 820 ohm, 2 W	27-388	HB 8211	AB
		x						Resistor, 450 ohm, 5 W	27-466		CS
			x					Resistor, 1.5k ohm, 5 W	27-499-10		CS
				x		x		Resistor, 2.5k ohm, 10 W	27-599-8		IRC
					x			Resistor, 1k ohm, 10 W	27-599-9		IRC
							x	Resistor, 1.5k ohm, 25 W	27-719	25F1500	WL
R38	x	x						Resistor, 1 ohm, 2 W	28-1253		IRC
			x		x			Resistor, 2 ohm, 2 W	28-1254		IRC
				x			x	Resistor, 3 ohm, 2 W	28-1255		IRC
						x		Resistor, 3.9 ohm, 2 W	28-1256		IRC

Table 6-1. Replacement Parts List (Sheet 4 of 6)

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
R39	x							Resistor, 300 ohm, 5 W	27-457		CS
		x			x			Resistor, 400 ohm, 25 W	27-717	25F400	WL
			x					Resistor, 600 ohm, 10 W	27-599-10		IRC
				x				Resistor, 1k ohm, 10 W	27-599-9		IRC
						x		Resistor, 2.5k ohm, 10 W	27-599-8		IRC
							x	Resistor, 1k ohm, 25 W	27-727	25F1000	WL
R40	x	x			x			Resistor, 0.5 ohm, 7 W	28-1268-1		IRC
			x					Resistor, 1 ohm, 7 W	28-1268-3		IRC
				x				Resistor, 1.33 ohm, 7 W	28-1268-4		IRC
						x		Resistor, 2 ohm, 7 W	28-1268-5		IRC
							x	Resistor, 0.67 ohm, 7 W	28-1268-2		IRC
R41	x		x					Resistor, 180 ohm, 1/2 W	27-190	EB 1811	AB
		x			x			Resistor, 430 ohm, 1/2 W	27-1104	EB 4315	AB
							x	Resistor, 270 ohm, 1/2 W	27-191	EB 2711	AB
R42	x	x	x	x	x	x	x	Pot., 200 ohm	29-524		CS
R43	x							Resistor, 0.12 ohm, 3 W	27-397-3		WL
		x	x	x	x	x	x	Resistor, 0.24 ohm, 2 W	28-1252		IRC
R44	x							Resistor, 7.5k ohm, 1/2 W	28-1258		IRC
		x						Resistor, 12.4k ohm, 1/2 W	28-1259		IRC
			x					Resistor, 15k ohm, 1/2 W	28-1260		IRC
				x	x			Resistor, 24.9k ohm, 1/2 W	28-1261		IRC
						x		Resistor, 30.1k ohm, 1/2 W	28-1262		IRC
							x	Resistor, 40.2k ohm, 1/2 W	28-1263		IRC
R45	x	x	x	x	x	x	x	Resistor, 100 ohm, 1/2 W	28-1203		IRC
R46	x	x	x	x	x	x	x	Resistor, 47 ohm, 1/2 W	27-181	EB 4701	AB
R47	x							Pot., dual, 1.5k/15 ohm, 2W	29-401		CS
		x						Pot., dual, 2k/20 ohm, 2W	29-402		CS
			x					Pot., dual, 3k/30 ohm, 2 W	29-403		CS
				x	x			Pot., dual, 4k/40 ohm, 2 W	29-404		CS
						x	x	Pot., dual, 6k/60 ohm, 2 W	29-520		CS
R49	x	x	x	x	x	x	x	Resistor, 0.08 ohm, No.21 cupron, 2-1/4 in.	21-033		SR
R51	x	x						Resistor, 10 ohm, 1/2 W	27-180	EB 1001	AB

Table 6-1. Replacement Parts List (Sheet 5 of 6)

REF DES	QRS MODELS 15-2	20-4	30-1	40-.75	40-2	60-.5	60-1.5	DESCRIPTION	SORENSEN PART NUMBER	MANUFACTURER PART NUMBER	MANUFACTURER CODE
S1	x	x	x	x	x	x	x	Switch, DPST, 10 A, 250 Vac	45-112	7561K5	CH
S2	x	x	x	x	x	x	x	Switch, DPDT, 10 A, 250 Vac	45-121	7565K6	CH
T1	x							Transformer	126-2298		SR
		x						Transformer	126-3002		SR
			x					Transformer	126-2299		SR
				x				Transformer	126-3000		SR
					x			Transformer	126-3003		SR
						x		Transformer	126-3001		SR
							x	Transformer	126-3004		SR
XF1	x	x	x	x	x	x	x	Holder, Fuse, 3 AG	42-459	342012	LF

Table 6-1. Replacement Parts List (Sheet 6 of 6)

FIGURE A

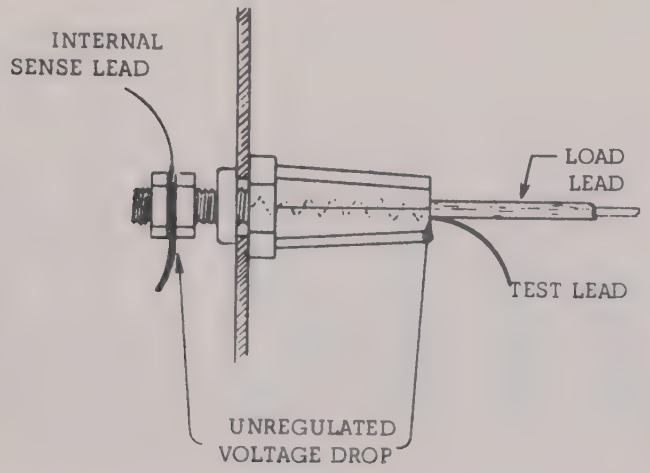

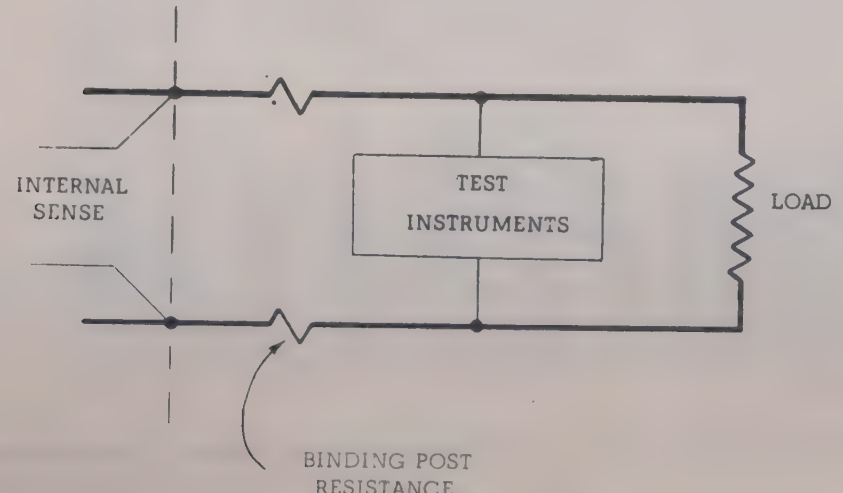

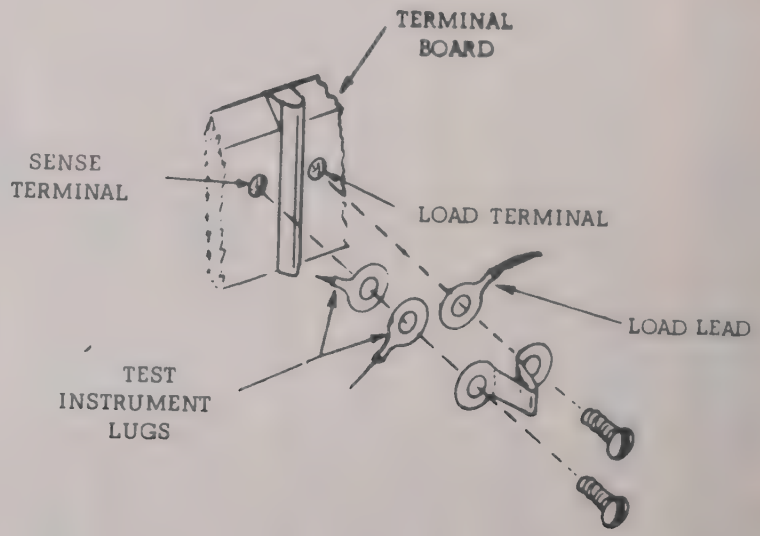

FIGURE B

TIPS ON VERIFYING SPECIFICATIONS

High-performance regulated power supplies require careful testing if a true evaluation of performance is to be made. In numerous instances, incorrect testing procedures have provided invalid data which have led to an unwarranted rejection of the supply and its return to Sorensen. This represents an unnecessary inconvenience to you, our customer, and, of course, to ourselves.

To help in minimizing if not eliminating this problem, a set of general rules pertaining to measurements is given below:

1. Connect all test instruments at the power-supply sensing terminals, not at the load. Connect the load to the load terminals.

   The deleterious effects of measuring at the load may be illustrated by an example. Consider a 10 V, 1 A unit with a specified load regulation of ±0.01%, (±1.0 mV). With the output set to 10 V, the voltage deviation could be 2 mV. But this is at the supply terminals. Just 1 foot of No.23 load-lead wire is sufficient to drop 16 mV (eight times the maximum deviation permitted by the regulation specifications). Results from a test setup of this kind would, of course, be invalid.

   Another not-so-obvious example of the same problem is encountered when measurements are made at binding-post terminals instead of the barrier-type "sense" terminals. The binding posts, in essence, introduce a resistance between the test leads and the regulated (sensed) output points. The resistance, of course, results in a voltage drop, which is subtracted from the output voltage before measurement. It therefore has the same effect as load leads. Figure A gives both schematic and physical representations of a binding post and its unregulated voltage drop. Note that exactly the same problem may be encountered when the load leads are connected to the sense terminals. (Figure B illustrates correct load-lead location.)

2. Use twisted wire or coaxial cable for test leads.

   Stray pickup many times can and does substantially influence the extremely small deviations being measured.

3. Terminate test leads with solder or spade-type lugs.

   Alligator clips or other similar types of connectors may introduce undesirable contact resistances and result in false readings.

4. Connect leads from each measuring instrument to power-supply sense terminals.

   Interaction or coupling effects sometimes cause inaccurate measurements.

5. After connecting test system, check for system-generated noise and ripple.

   Ground loops sometimes introduce noise and ripple not related to power supply's performance.

6. Read and digest testing information provided in your instruction manual before attempting any measurements.

RAYTHEON COMPANY□SORENSEN OPERATION
Richards Avenue, Norwalk, Connecticut □ 06856
Telephone 203-838-6571 □ TWX 710-468-2940

Sales and Service Facilities

Sales and Service Headquarters: Raytheon Company, Sorensen Operation, Richards Avenue, Norwalk, Conn. 06856
Tel: 203-838-6571 • TWX: 710-468-2940 • TELEX 96-5953

ALABAMA — Huntsville 35802
BCS Associates, Inc.
2317 Bob Wallace Ave., S.W.
P.O. Box 1273
205-534-1648

ARIZONA — Phoenix 85018 ■
Barnhill Associates
4900 East Indian School Rd.
602-959-2115

CALIFORNIA — Pasadena 91105 ■
Ward-Davis Associates
770 South Arroyo Parkway
213-684-2840

CALIFORNIA — Palo Alto 94303 ■
Ward-Davis Associates
3941 E. Bayshore
415-968-7116

CALIFORNIA — San Diego 92110
Ward-Davis Associates
3442 Hancock Street
714-297-4619

COLORADO — Denver 80226 ■
Barnhill Associates
1170 S. Sheridan Blvd.
303-934-5505

CONNECTICUT — Hartford 06114 ■
Instrument Associates, Inc.
234 Murphy Road, Brainard Ind. Park
203-525-9367

FLORIDA — Orlando 32803 ■
BCS Associates, Inc.
940 N. Fern Creek Ave.
P.O. Box 6578
305-843-1510

HAWAII — Honolulu 96803
Earl Associates, Inc.
1638 Kona Street
808-949-6953

ILLINOIS — Chicago 60645 ■
Pivan Engineering Company
3535 West Peterson Avenue
312-539-4838

INDIANA — Indianapolis 46280
Pivan Engineering Company
8545 Northcrest Court — Suite B
317-253-1681

IOWA — Cedar Rapids 52402
Pivan Engineering Company
P.O. Box 1274
4403 First Avenue, S.E.
319-365-6635

KANSAS — Mission 66202
Pivan Engineering Company
5920 Nall Avenue
913-722-1030

MARYLAND — Kensington 20795 ■
Electronic Marketing Associates
11501 Huff Court
301-881-5300

MASSACHUSETTS — Boston Area ■
Instrument Associates, Inc.
30 Park Avenue, Arlington 02174
617-648-2922

MICHIGAN — Southfield 48075 ■
S. Sterling Company
21250 10½ Mile Road
313-357-3700

MINNESOTA — Minneapolis 55422
Pivan Engineering Company
3307 N. Highway 100
612-537-4501

MISSOURI — St. Louis 63141
Pivan Engineering Company
725 Old Ballas Road
314-872-8424

NEW JERSEY — (Southern N. J.)
Sonco
42R Monmouth Rd.
Eatontown, N. J. 07724
201-542-1441

NEW JERSEY — (Northern N. J.)
SBM Associates, Inc.
1519 Stuyvesant Ave.
Union, N. J. 07083
201-687-8737

NEW MEXICO — Albuquerque 87110
Barnhill Associates
827 Pennsylvania, N.E.
505-265-7766

NEW YORK — Metropolitan Area ■
SBM Associates, Inc.
28 Hobby Street
Pleasantville, N. Y. 10570
914-769-1811

NEW YORK — Long Island Area
SBM Associates, Inc.
528 Old Country Road
Plainview, L. I. 11803
516-433-1421

NEW YORK — Rochester 14625 ■
SBM Associates, Inc.
800 Linden Ave.
716-381-8330

NEW YORK — Syracuse 13211
SBM Associates, Inc.
138 Pickard Building
5858 E. Molloy Road
315-454-9377

NORTH CAROLINA — Greensboro 27405
BCS Associates, Inc.
1039 East Wendover Avenue
P.O. Box 6426
919-273-1918

OHIO — Cleveland 44124 ■
S. Sterling Company
5827 Mayfield Road
216-442-8080

OHIO — Dayton 45429 ■
S. Sterling Company
2673 Culver Ave.
513-298-7573

PENNSYLVANIA — Mid-State Area
Sonco
Park Place Office Bldg.
Camp Hill, Pa. 17011
717-761-0577

PENNSYLVANIA — Philadelphia Area ■
Sonco
107 Town Center Road
King of Prussia, Pa. 19406
215-265-3250

PENNSYLVANIA — Pittsburgh 15220 ■
S. Sterling Company
No. 2, Parkway Center
412-922-5720

TEXAS — Richardson 75080
Barnhill Associates
312 No. Central Expressway
Suite 220
214-231-2573

TEXAS — Houston 77027
Barnhill Associates
3810 Westheimer
Suite 332
713-621-0040

WASHINGTON — Seattle 98109 ■
ARVA, Inc.
1320 Prospect Street
206-622-0177

WISCONSIN — Brookfield 53005
Pivan Engineering Company
3055 No. Brookfield Road
414-786-1940

FOREIGN REPRESENTATIVES

Central Export Offices
Raytheon International Affairs
141 Spring Street
Lexington, Massachusetts 02173
617-862-6600
Telex 92-3455

CANADA — Downsview, Ontario ■
Allan Crawford Associates, Ltd.
65 Martin Ross Avenue
416-636-4910

CANADA — Ottawa, Ontario
Allan Crawford Associates, Ltd.
376 Churchill Avenue
613-725-1288

CANADA — Montreal 8, P.Q.
Allan Crawford Associates, Ltd.
1285 Hodge Street
514-747-9849

CANADA — New Westminster, B.C.
Allan Crawford Associates, Ltd.
Annacis Industrial Estate
721 Aldfrod Avenue
604-524-1161

CONTINENTAL EUROPE
SORENSEN AG ■
8045 Zurich, Switzerland
Binzstrasse 18
Tel: 51-358724

FRANCE
TUNZINI-SAMES ■
21 Rue Jean Mace
(38) Grenoble
Tel: 44-77-64

WEST GERMANY
SORENSEN G.m.b.H. ■
6 Frankfurt am Main
Wilhelm-Leuschnerstrasse 93
Tel: 338502

UNITED KINGDOM
COSSOR ELECTRONICS LTD. ■
The Pinnacles
Harlow, Essex, England
Tel: Harlow 26862

■ These locations have service facilities

Printed in USA

A14-4136
9-30-69

RAYTHEON

Raytheon Company ☐ Sorensen Operation
Richards Avenue, Norwalk, Connecticut ☐ 06856
Tel: 203-838-6571; TWX 710-468-2940; TELEX 96-5953

www.manualsplus.com
1006679

14-3252C